

surveillix

SCS Surveillix Central Station Software

User Manual



Please carefully read these instructions before using this product.
Save this manual for future use.

TOSHIBA


EXPLANATION OF GRAPHICAL SYMBOLS



WARNING: Text set off in this manner indicates that failure to follow directions could result in bodily harm or loss of life.



CAUTION: Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.

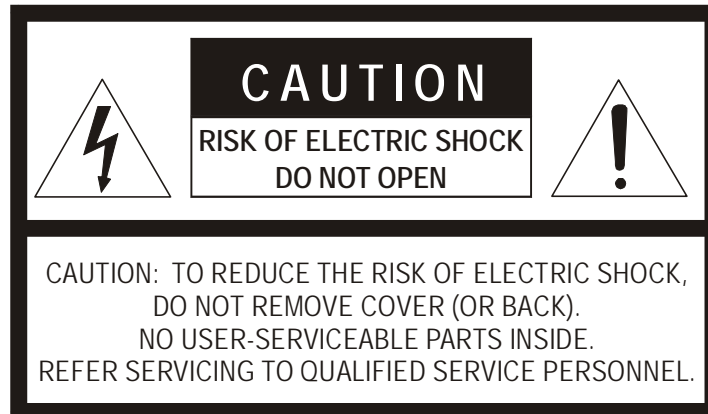

TECHNICIAN NOTES



WARNING: Only authorized technicians trained by Toshiba should attempt to repair this DVR unit. All troubleshooting and repair procedures that may be shown are for reference and minor repair only. Because of the complexity of the individual components and subassemblies, no one should attempt to make repairs at the component level or to make modifications to any printed wiring board. Improper repairs can create a safety hazard. And any indications of component replacement or printed wiring board modifications may void any warranty.



WARNING: TO REDUCE THE RISK OF ELECTRICAL SHOCK OR DAMAGE TO THE EQUIPMENT:

- DO NOT DISABLE THE POWER GROUNDING PLUG. THE GROUNDING PLUG IS AN IMPORTANT SAFETY FEATURE.
- PLUG THE POWER CORD INTO A GROUNDED (EARTHED) ELECTRICAL OUTLET THAT IS EASILY ACCESSIBLE AT ALL TIMES.
- DISCONNECT THE POWER FROM THE COMPUTER BY UNPLUGGING THE POWER CORD.

NOTES:

TABLE OF CONTENTS

INTRODUCTION.....	1
Product Description	2
PC Requirements	2
Recommended Requirements for 1-10 DVR Connections	2
Recommended Requirements for 11-50 DVR Connections	2
Installing the SCS Software	3
Running the SCS Software	3
Logging in	3
Register SCS.....	4
Register Online	4
Register by Phone	5
SCS BASICS	7
Connecting to a DVR.....	8
Viewing Video.....	8
Moving Cameras	8
Remove a Camera	8
Main Display Screen	9
Connection List.....	9
Shortcut Lists.....	10
Hot Spot	10
DVR Options.....	11
Camera Options	11
Main Display Toolbar	12
Live Display	12
Live Camera Options	13
Live Camera Tools	13
Custom Screens.....	14
Creating Custom Screens.....	14
Using Multiple Windows	14
Multiple Monitor Support	14
Using Multiple Monitors	14
SETUP	17
General Setup	18
Locking Functions.....	18
Live Setup	19
Set Schedule to Discard Alarms	20
Creating a Schedule to Discard Normal Alarms	20
DVR List Setup.....	21

Adding a New Site	21
Editing a Site	21
DVR POS Setup	22
Admin Setup	23
Configuring Import / Export	24
Exporting Settings	24
Import Settings	24
Scheduling Log Cleanup	24
User Management	25
Creating Users	25
Editing Users	25
E-Mail Alert Setup	26
General E-mail Setup	26
Users E-mail Setup	26
Creating a User	26
Activating a User	26
Editing a User	26
Deleting a User	27
Normal Alarm E-mail Setup	27
MAPS	29
Map Overview	30
Adding a Map File	30
Adding An HTML Map	31
Opening a Map	31
Closing a Map	31
Creating Map Levels	31
Placing Markers on a Map	32
Attaching Cameras/Sensors	32
Attaching Map Links	32
Changing Alarm Colors	33
Adding a Map Alarm Sound	33
Viewing Video on Alarm	33
VIDEO BACKUP	35
Network Backup	36
Backing up All Cameras	36
Clip Backup	37
Backing up Selected Cameras	37
SEARCH	39
Search Overview	40
Performing a Basic Search	40
Bookmarks	41

Search Bookmarks.....	41
Modify Bookmarks.....	41
Save to JPG or AVI	42
Printing an Image	42
Preview Search	43
Performing a Preview Search.....	43
Index Search	44
Performing an Index Search.....	44
Status Search.....	45
Performing a Status Search.....	45
POS Search	45
Multiple Search.....	46
Performing a Multiple DVR Search.....	46
LOG FILES	49
SCS System Log.....	50
View the SCS Log	50
EVENT MANAGEMENT	51
Event Viewer Window	52
Filtering Alarm Events	52
Opening an Alarm Event	52
POS FEATURES	53
POS Options	54
Add POS Search Keywords.....	54
Add POS Alert Text	54
POS Text Overlay	55
Turn Text Overlay On.....	55
Turn Text Overlay Off	55
POS Search	56
Search POS Data.....	56
Filter POS Search Results.....	56

NOTES:

INTRODUCTION

- Product Description
- PC Requirements
- Installing the SCS Software
- Running the SCS Software
- Register SCS

PRODUCT DESCRIPTION

SCS software is Network DVR Management Software, a powerful utility that allows 100 or more DVR units to be controlled using one computer. This software allows you to view live video, search saved video, edit and configure setup on each DVR, and import maps of buildings and other locations.

The SCS software was specifically designed as an Enterprise software solution.

PC REQUIREMENTS

These are the minimum hardware requirements to operate the SCS Software.

Recommended Requirements for 1-10 DVR Connections

- Pentium IV 3.4 GHz+ CPU (or Equivalent)
- 1GB System Memory
- DirectX 9 or Higher
- Compatible Video Card (ATI Preferable) with 256MB+ Memory
- Internet or LAN Connection (56K, DSL, Cable Modem, T1, ISDN, etc.)
- TCP/IP Installed
- Microsoft® Windows® 2000, or XP Operating System
- 1024 X 768 Display Resolution
- 32 Bit Color Depth or Better

Recommended Requirements for 11-50 DVR Connections

- Pentium D 3.4 GHz+ (or Equivalent)
- 2GB System Memory
- DirectX 9 or Higher
- Compatible Video Card (ATI Preferable) with 256MB+ Memory
- Internet or LAN Connection (DSL, Cable Modem, T1, ISDN, etc.)
- TCP/IP Installed
- Microsoft® Windows® 2000, or XP Operating System
- Multi-Monitor Support
- 1024 X 768 Display Resolution
- 32 Bit Color Depth

INSTALLING THE SCS SOFTWARE


CAUTION: SCS and Emergency Agent are not compatible to run on the same PC. If you have Emergency Agent installed on this PC, you must uninstall it before installing SCS. SCS will perform the same alarm notification as Emergency Agent.

1. Locate the SCS CD-ROM and make sure that the PC is turned on.
2. Insert the SCS CD-ROM into the CD drive.
3. If the CD Drive is set to auto run, wait for the SCS Setup screen to appear. Once it appears, go directly to Step 4.
 - a) If the Setup program does not automatically start, or to manually start the setup process:
 - b) Click Start > My Computer – or – double-click the **My Computer** icon on the desktop.
 - c) Locate the CD drive and double-click on it to display contents of the CD-ROM, and then double-click on the SCS directory to display contents of the directory.
 - d) Double-click **Setup.exe** – or – click **Setup.exe** then click **Open**.
4. Follow the on-screen instructions for installing the software.
5. The Setup process will notify you when SCS is installed. Click **Finish** to complete Setup and close the installer window.

RUNNING THE SCS SOFTWARE

To run the SCS Software click
Start > All Programs > Surveillix > SCS > SCS.

Until the software is registered, a reminder will display.

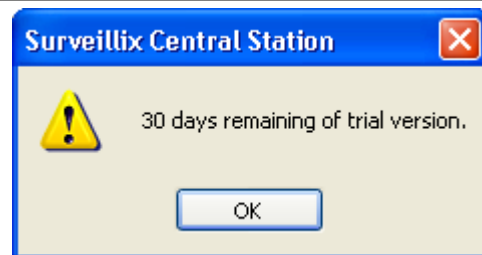


Logging in

Each time the SCS software starts, the Authentication window opens, prompting the user to login with a user account.

If logging in for the first time, use this login:

USER ID: administrator


PASSWORD: <none>

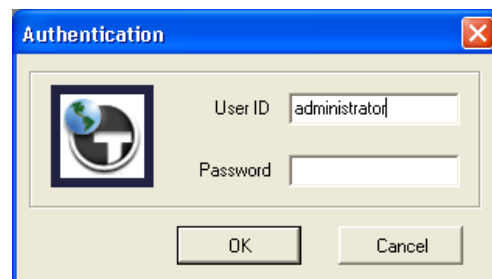


REGISTER SCS

Register Online



1. Locate the System ID in the SCS software. Click **About > Register SCS**.
2. Open an Internet browser and go to the following website: www.surveillixdvr.com/support.htm

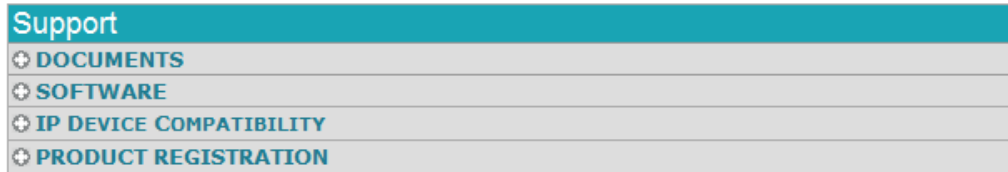

3. Click **Product Registration**.
4. Click **Register** under SCS Multi-Site Management Software Registration.

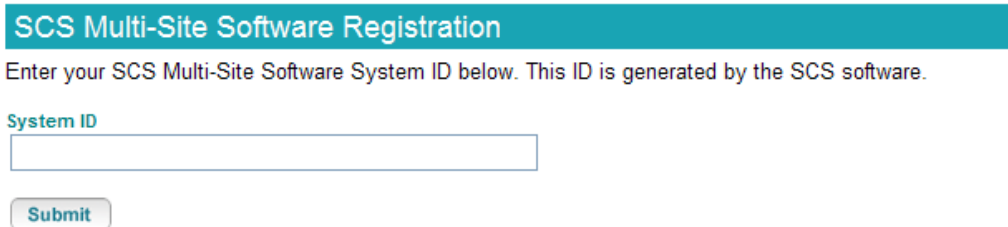

5. Enter the System ID generated by the SCS Software.
6. Click **Submit**.

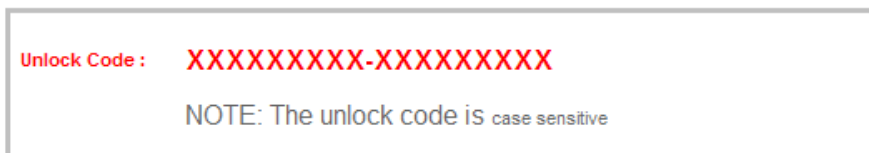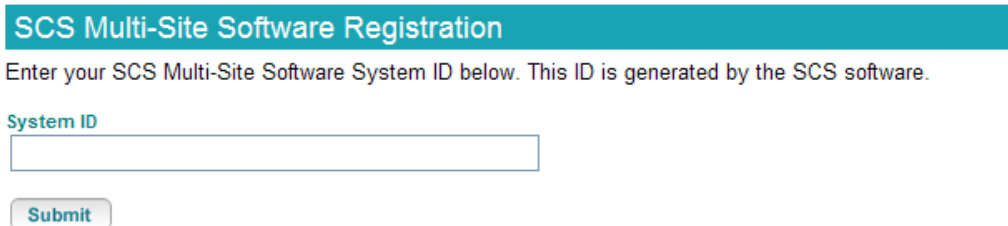

7. Copy and paste the unlock code into the License Key Field of the SCS registration.
8. Click **Register**.

Register by Phone

The following information is necessary for phone registration:

- Company Name
- Company Phone Number
- E-mail Address for notification of updates
- System ID
- Serial Number (S/N) from the box or CD case label

1. Locate the System ID in the SCS software. Click **About** > **Register**.
2. Call (877) 855-1349.
3. After completing registration by phone, enter the License Key provided by Toshiba in the Register SCS window.
4. Click **Register**.

NOTES:

SCS BASICS

- Connecting to a DVR
- Main Display Screen
- Live Display
- Custom Screens
- Using Multiple Windows
- Multiple Monitor Support

CONNECTING TO A DVR

Refer to the DVR manual for instructions on configuring the DVR for use with the SCS software.

Viewing Video

1. Locate the DVR in the Connection list. If it is not visible, click the plus sign (+) next to the DVR Group Name to expand the file tree.
2. Double click the desired DVR icon – or – Right-click the icon and select Connect
3. Click the plus sign next to the DVR icon to display the connected camera icons
4. To view a camera double click it – or – Drag the camera icon onto a box on the Live Display screen

Moving Cameras

To change the position of a camera on the Live Display Screen:

Click on the displayed video and drag to a new box

Remove a Camera


To remove a camera from the Live Display Screen:

Right-click the displayed video and select Close

– or –


Right-click the camera icon in the Connection list and select Close Live

MAIN DISPLAY SCREEN

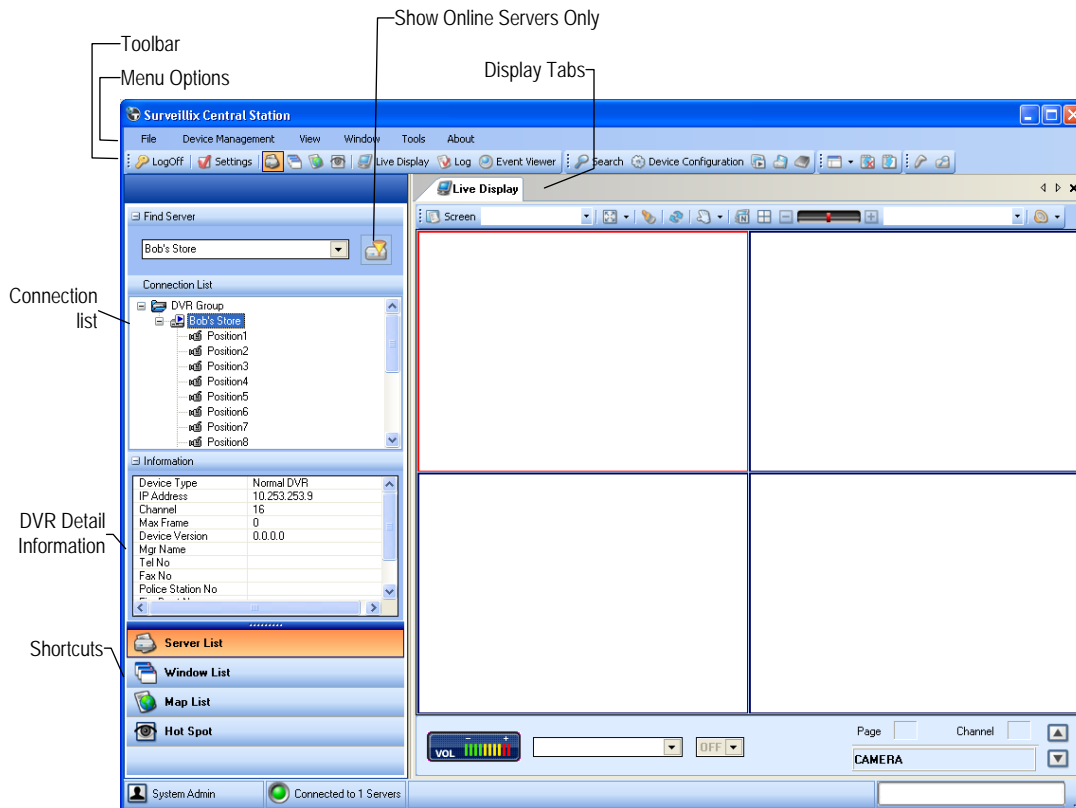

Connection List

The Connection list displays the current DVRs configured in the DVR List Setup window. Each DVR can be displayed with the cameras showing or cameras minimized.

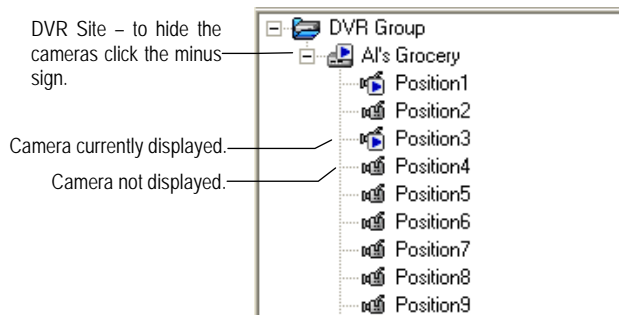

Shortcut Lists

The shortcut lists help organize connected DVRs, open windows and available maps.

Server List. The Server List displays all added DVRs and allows users to connect to DVRs and their associated cameras quickly. This list is the default display.

Window List. The Window List organized open windows into the categories: Live Windows, Search Windows, and Other Windows.

Map List. The Map List displays all maps, open and closed, including HTML map links. The maps are listed in the order they are added.




Hot Spot

The Hot Spot feature allows users to zoom in on an area of interest. This feature is especially useful when using a network device as the Hot Spot will display the area in detail.


Click a live camera.

1. Click the Hot Spot Shortcut link on the Main Display screen.
2. Drag a box around the area on the Hot Spot display. The corresponding camera on the Live Display will zoom in to the Hot Spot.
3. Use the on-screen PTZ controller to adjust the camera if using a PTZ enabled camera.

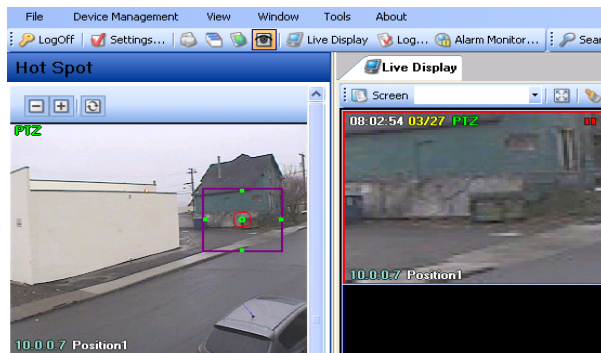

DVR Options

Right-click a DVR icon to display these shortcut options.

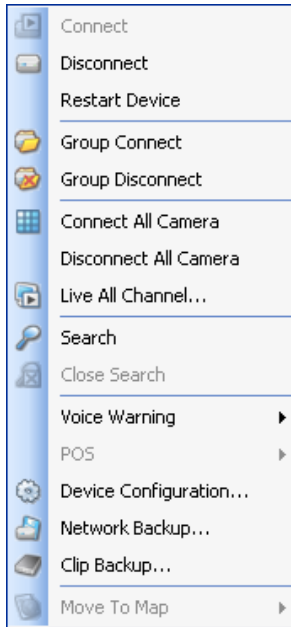

Connect – Opens a connection to the DVR.

Disconnect – Closes an open connection to the DVR.

Restart Device – Restart the selected server.

Group Connect – Opens a connection to all DVRs.

Group Disconnect – Closes all open connections.

Connect All Cameras – Connects all camera channels on the DVR.

Disconnect All Cameras – Disconnects all camera channels on the DVR.

Live All Channel - Displays all channels in a new window.

Search Display – Opens Search Display with the current DVR selected.

Close Search – Closes the Search Display and returns to Live Display.

Voice Warning – Select Voice 1 or Voice 2. (disabled)

POS – Displays POS options (optional upgrade).

Device Configuration – Opens the DVR Setup window.


Network Backup – Opens the Network Backup window.

Clip Backup – Opens the Clip Backup window.

Move to Map – Shows a list of the maps associated with the server. Select a map to open it in a new tab.

Camera Options

Right-click a camera icon to display these shortcut options.

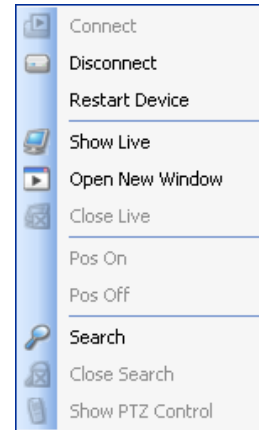

Connect – Opens a connection to the DVR.

Disconnect – Closes an open connection to the DVR.

Restart Device - Restart the selected server.

Show Live – Displays selected camera in the Camera Display Area.

Open New Window – Displays selected camera in a new window.

Close Live – Removes the camera from the Camera Display Area.

Pos On – Enable the POS text overlay.

Pos Off – Disable the POS text overlay.


Instant Recording – Triggers instant recording on selected camera

Search Display – Opens Search Display with the current DVR selected

Close Search – Closes the Search Display and returns to Live Display


Show PTZ Control – Opens the on-screen PTZ controller

Main Display Toolbar

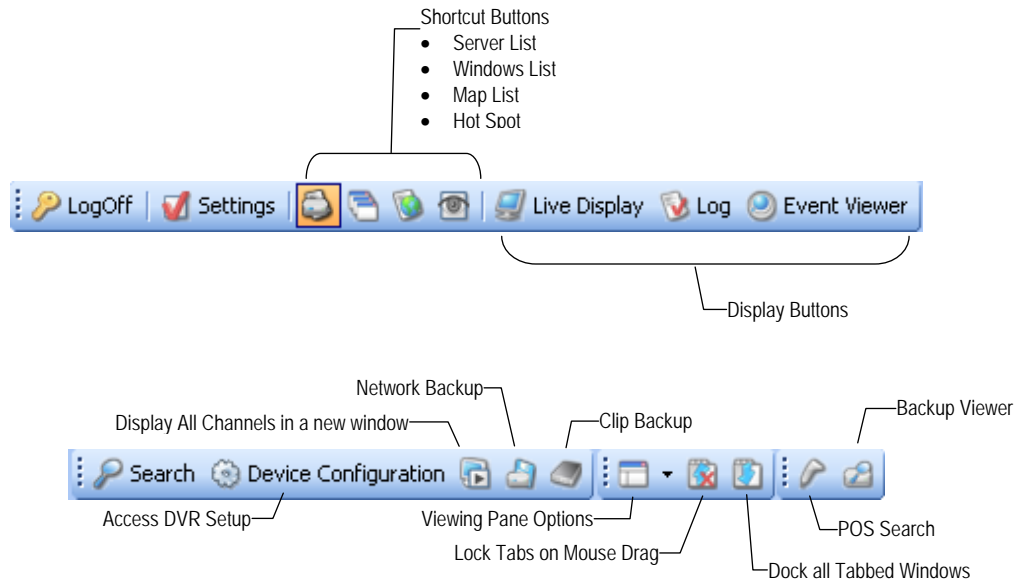


NOTE: Motion grids configured using the Device Configuration will be advanced motion grids.

LIVE DISPLAY

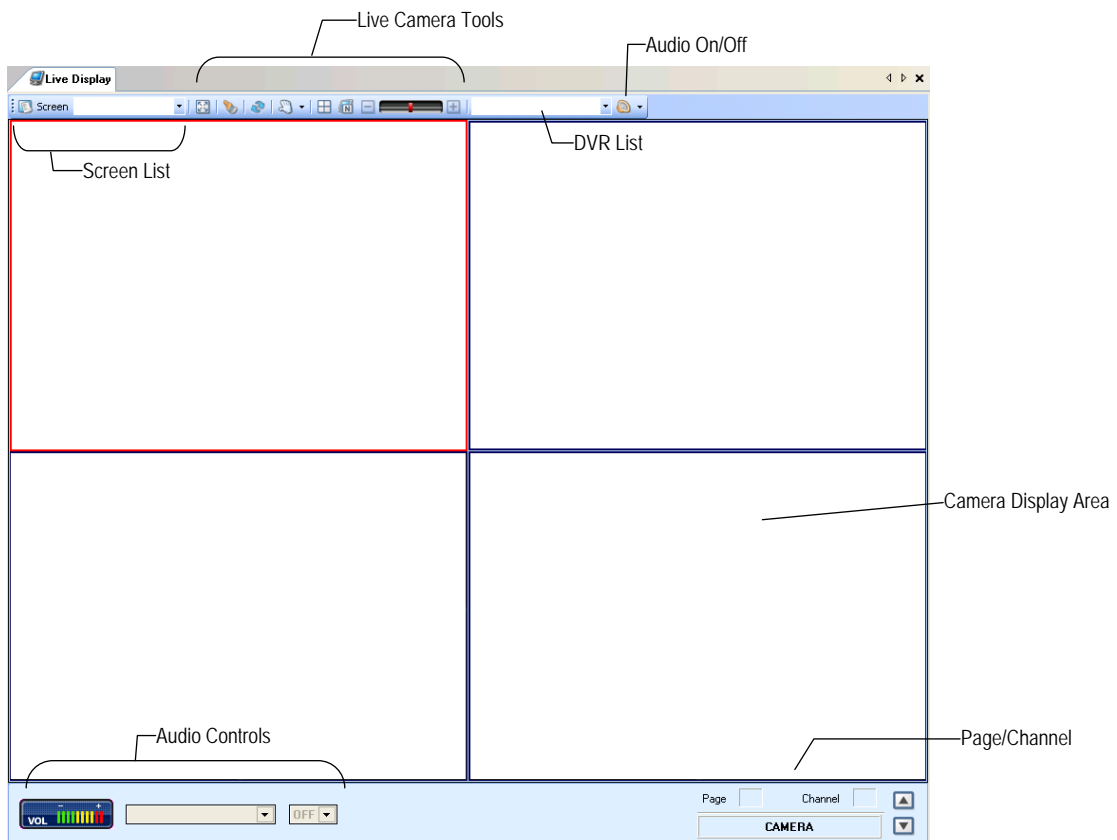

Camera Display Area – Displays up to 64 cameras. Move video display by dragging display to a different square.

Live Camera Options

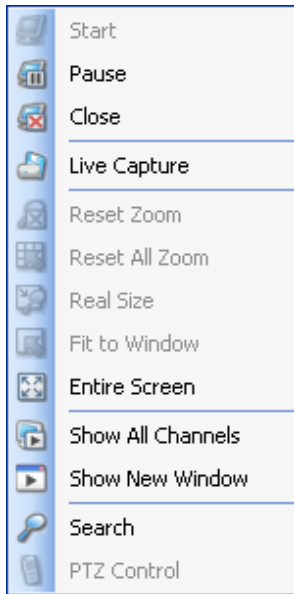

Start – Start live video after pausing.

Pause – Pause live video.

Close – Close live video display.

Live Capture – Capture a JPG snapshot.

Reset Zoom – Reset Zoom on specific camera.

Reset All Zoom – Reset Zoom on all cameras.

Real Size – Resize camera to actual resolution size.

Fit to Window – Return full screen display to show full Live Display window.

Entire Screen – Displays the Live Display full-screen (Press ESC to exit full-screen mode)


Show All Channels – Opens a new window with all channels displayed.

Show New Window – Open a new window with selected channel displayed.

Search – Opens the Search Display with the channel selected.

PTZ Control – Opens the on-screen PTZ controller.

Live Camera Tools

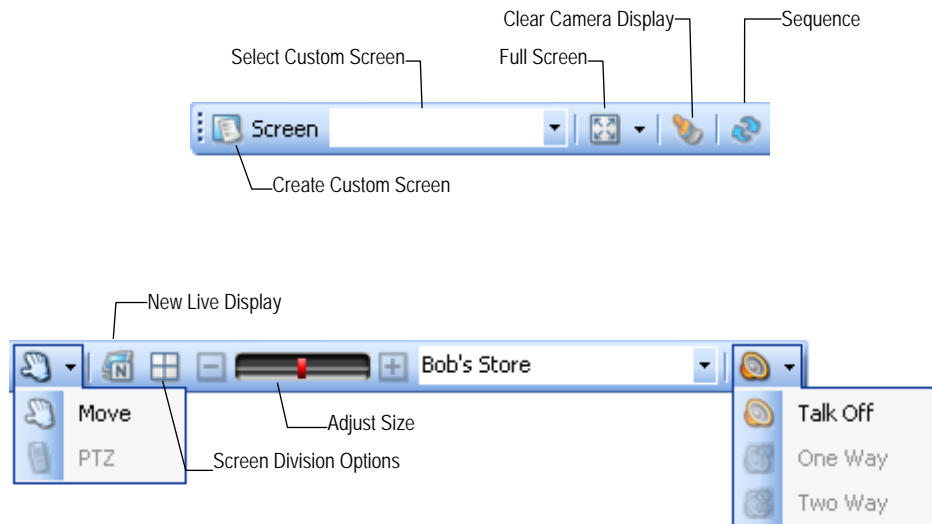

Move – Drag live cameras from one location on the screen to another. Selected by default.

PTZ – Enable on-screen PTZ compass. Drag mouse on the screen to move a PTZ camera.

Adjust Size – Adjust the size of a single camera display. Double-click live video for single camera display; double click to return to previous camera view.

Talk Off / One Way / Two Way – Turn on or off the two way audio with the selected DVR.


CUSTOM SCREENS

The SCS software allows the user to create groups of cameras called screens and customize the organization of the cameras. These screens can be selected from the Screen list.

Each Screen can contain up to 64 different cameras, and the Screen Division buttons will affect only the selected screen. Screen names and configurations will not be available unless Auto Load Settings (on Log on) and Auto Save Settings (on Log off) options are selected in the DVR Options Setup.

Creating Custom Screens

Select a screen division option for the custom screen configuration.

1. Add cameras to the Live Display.
2. Click  Screen to open the Screen Position Name window.
3. Enter the name of the screen in the blank box and click Add.
4. Repeat to add additional new screens.
5. Click the X to close the window.


NOTE: After making any changes to the custom screen, re-open the Screen Position Name window, select the screen name and click Update to save the changes.



USING MULTIPLE WINDOWS

The SCS software can support multiple open windows at one time. The windows are organized using tabs at the top of the Live/Search View Area. Switch between windows by clicking the appropriate tab.

The Window List in the left pane also organizes open windows by type: Live, Search, and Other.



MULTIPLE MONITOR SUPPORT

Multiple monitors may be used with the SCS Software. Use multiple monitors to view the Map Editor, the Search window, and the Live Display at the same time.

Most Microsoft Operating Systems support multiple monitors but the video card may need to be upgraded to support more than one display. Contact a local computer vendor or IT director for more information.

Using Multiple Monitors

1. Drag a tab to open it in a new window.
2. Drag the window to another monitor.
3. Maximize the window by clicking the Maximize button on the top right corner of the window.

NOTES:


NOTES:

SETUP

- Adding a New Site
- Configuring Import / Export
- Creating Users
- General E-mail Setup

GENERAL SETUP

Use the General Options to configure map alarm settings and user information.

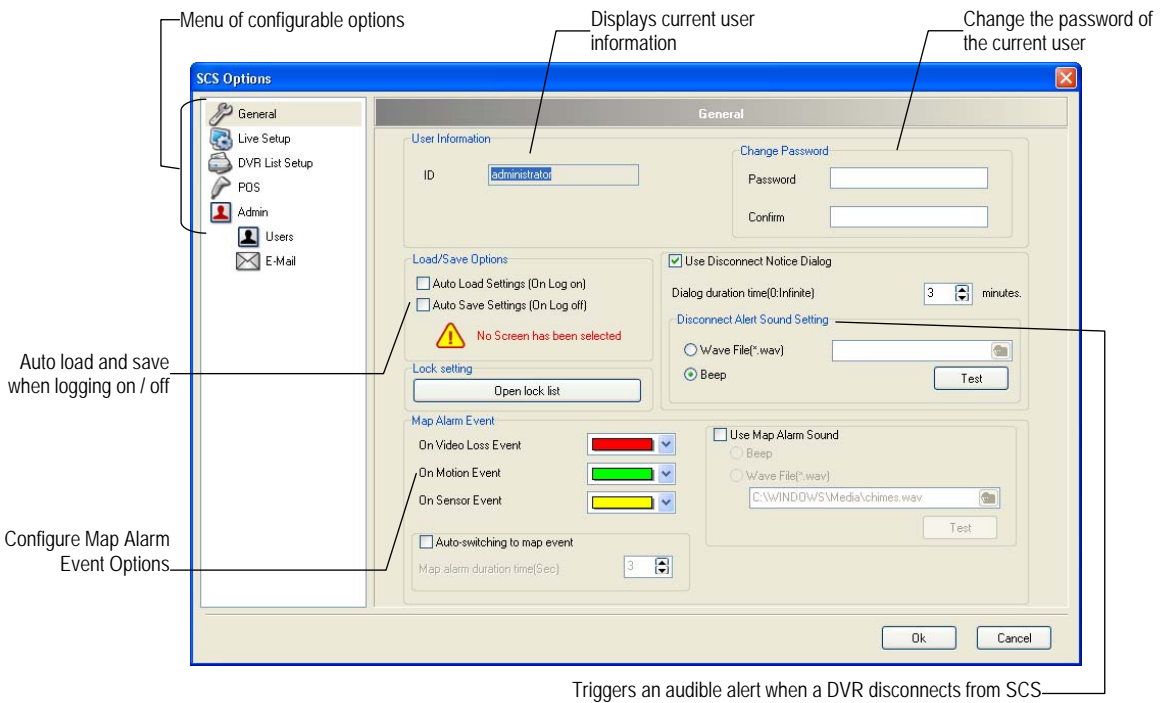


User Information	Displays the current user ID.
Change Password	Change the password of the current user.
Load/Save Options	Auto load or auto save all settings
Open Lock List	Displays a list of functions that can be locked after configurable time of inactivity.
Use Disconnect Notice Dialog	Opens a dialog box, for the specified number of minutes, to indicate that a DVR has disconnected from SCS.
Disconnect Alert Sound Setting	Specify the audible alert to sound when a DVR disconnects from SCS.
Map Alarm Event	Specify the colors that display around map alarms on alarm events.
Popup Map Display on Map Alarm	Opens the map associated with an alarm on an alarm event for the specified number of seconds.
Use Map Alarm Sound	Triggers an audible alarm on a map alarm event.

Locking Functions


Use the Lock List function to lock specific functions after the user-defined waiting period.

- Surveillix Central Station Setup
- DVR Configuration
- Backup
- Edit Map
- Show SCS Log Viewer
- Show Event Viewer
- Minimization or Maximization
- Shut down SCS
- Storage Setup
- Search
- Backup Viewer
- DVR Upgrade

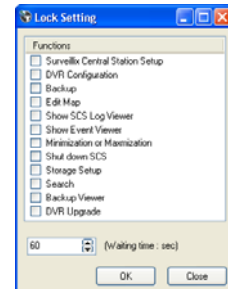

LIVE SETUP


Use the Live Setup to configure on screen display options, full-screen on alarm settings, and JPEG image capture on alarm.

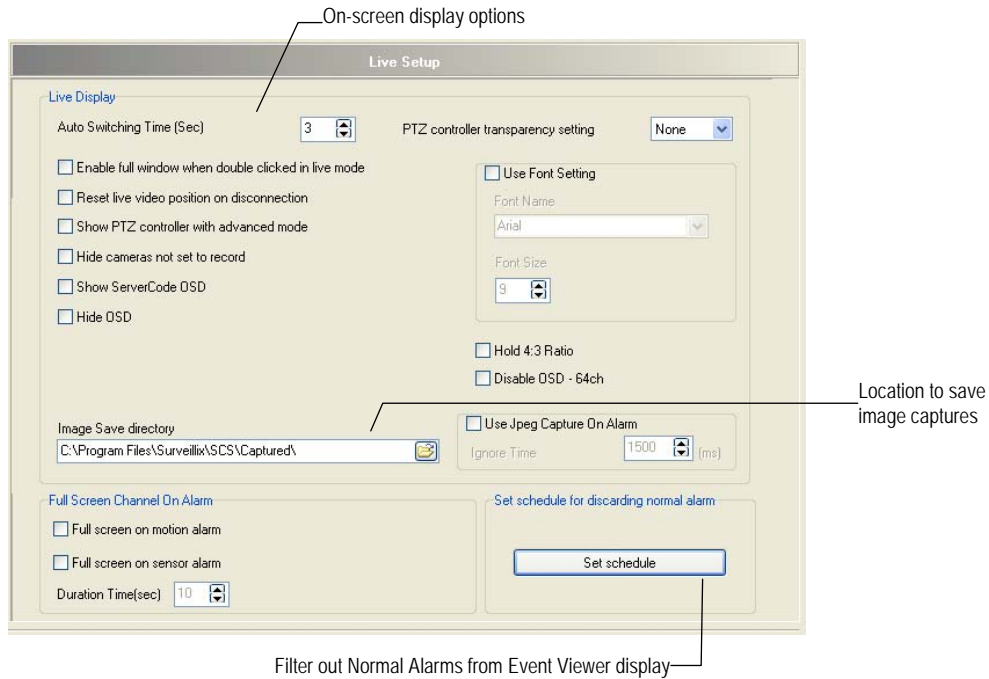

Auto Switching Time (Sec)	Sets time between the camera view sequencing
PTZ controller transparency setting	Set the transparency level of the PTZ controller.
Enable full window when double clicked in live mode	Enable to show a channel full screen when the live mode display is double-clicked.
Reset live video position on disconnection	Resets video positioning to display in sequential order.
Show PTZ controller with advanced mode	Show that advanced menu when the PTZ controller opens.
Hide cameras not set to record	Hide cameras that are not set to record.
Show ServerCode OSD	Show the Server Code (DVR ID) on screen.
Hide OSD	Hide all on screen display text.
Use Font Setting	Change the font and font size of the on screen display text.
Hold 4:3 Ratio	Preserves the 4:3 aspect ratio of the video. Use this function when SCS is viewed on a widescreen display.
Disable OSD - 64CH	Disables the on-screen display for the 64ch screen division option.
Image Save Directory	The location to which alarm images are saved.
Use Jpeg Capture on Alarm	Capture a JPEG image of the associated channel on an alarm event.
Full Screen Channel On Alarm	Show alarm video full screen on motion or sensor alarm. NOTE: The duration defines the amount of time the video will display before a subsequent alarm video can display. Single alarms will display full screen until closed by the user.
Set Schedule	Filter out Normal Alarms, by category, from the Event Viewer display.

Set Schedule to Discard Alarms


Create a schedule to filter out Normal Alarms, by category, from the Event Viewer display.

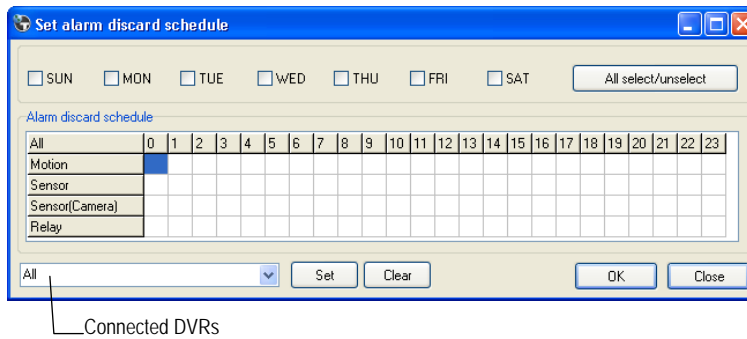

Creating a Schedule to Discard Normal Alarms

1. Select Tools > Settings > Live Setup.
2. Click Set Schedule.
3. Select the days of the week the schedule is for.
4. Drag the mouse to select the hours of the day to ignore the desired type of alarm.
5. Click Set after each block of time is selected
6. Select the DVRs to apply this schedule to from the list of connected DVRs.
7. Click OK when the schedule is complete.

DVR LIST SETUP

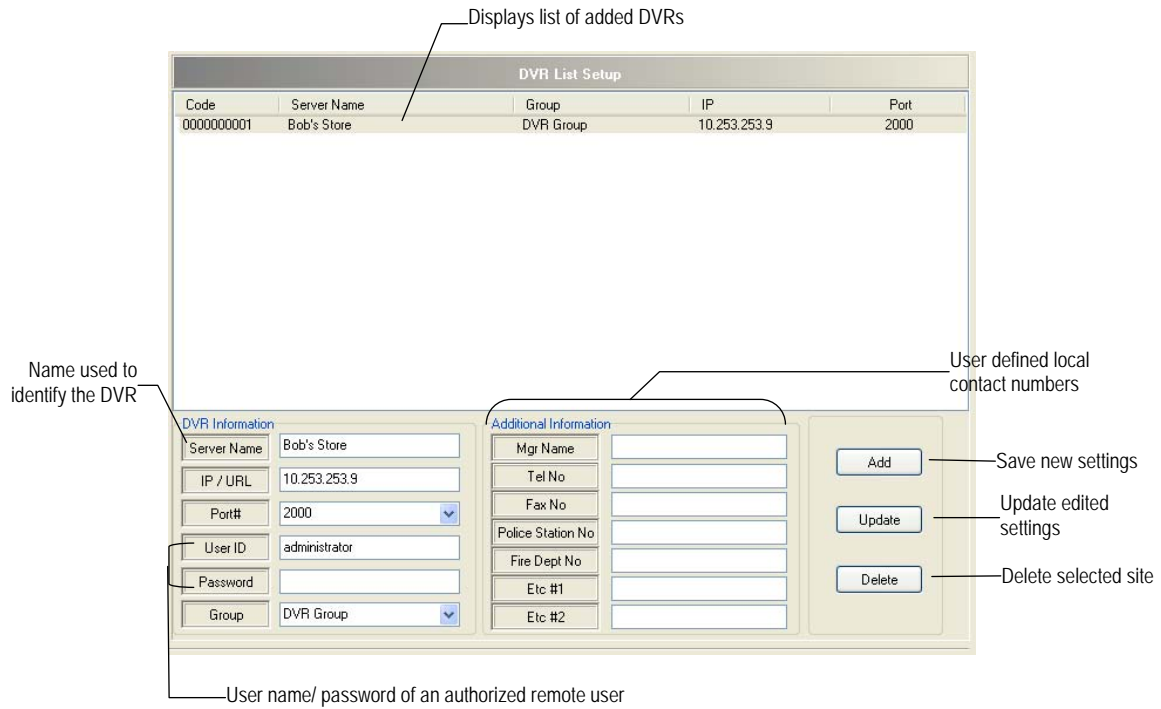


Adding a New Site

1. Select Tools > Settings > DVR List Setup.
2. Enter a name to identify the DVR in the Server Name box.
3. Enter the IP Address of the DVR in the IP / URL box.
4. Enter the Port number the DVR uses to transfer data. This port is specified in the Network Setup display on the DVR.
5. Enter the user name and password of an authorized remote user.
6. Enter the name of a new group in the Group box – or – click the arrow to select a previously created group.
7. When finished entering the information, Click Add.
8. Click OK to close the window.

Editing a Site

1. Select Tools > Settings > DVR List Setup.
2. Select the site to edit from the DVR list.
3. Edit the necessary information.
4. When finished editing information, click Update.
5. Click OK to close the window.


DVR POS SETUP

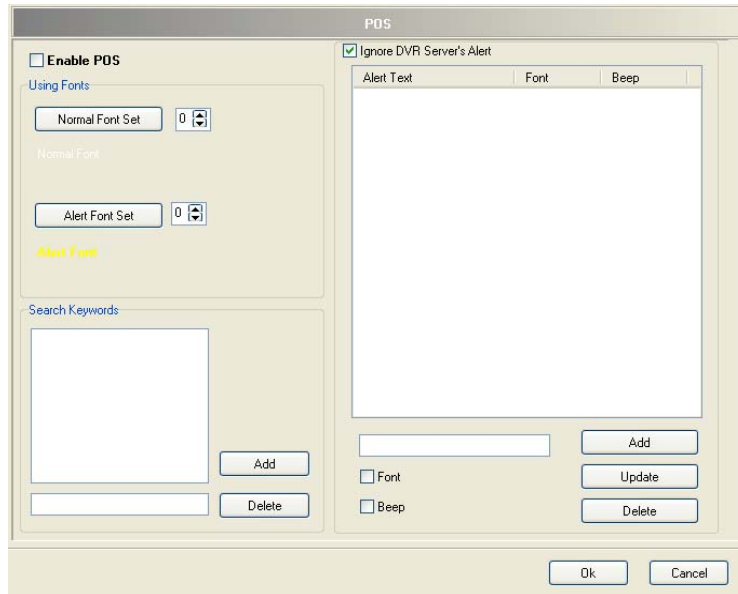

See the POS Features chapter of this manual for information on configuring POS options.

Enable POS	Enable to utilize POS functions such as searching and displaying POS text on screen.
Using Fonts	Configure the Font Set for Normal and Alert text.
Search Keywords	Configure for commonly searched POS items.
Ignore DVR Server's Alert	Allow custom alerts for SCS notification while ignoring DVR alerts.

ADMIN SETUP

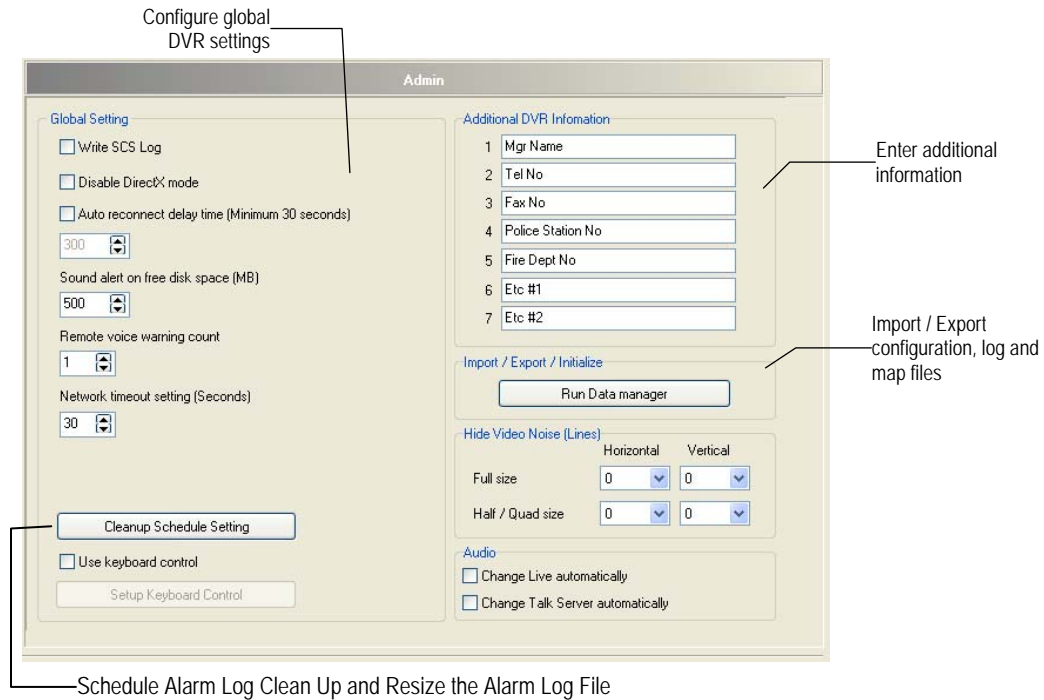

Write SCS Log	Enable to write SCS events to the DVR log.
Disable DirectX Mode	Disables Windows DirectX capabilities – (Disable when using older video chipsets that do not use DirectX).
Auto reconnect delay time	Specifies amount of time SCS waits before attempting to reconnect after a disconnection with a DVR.
Sound alert on free disk space	Enable an audible alert to sound when HDD space becomes limited on the DVR.
Remote voice warning count	Configures the number of times voice warning is sent to the Remote system.
Network timeout setting	Amount of time before SCS reports a disconnect from the DVR.
Cleanup Schedule Setting	Schedule alarm log clean up and resize the alarm log file.
Use keyboard control	Enable use of a PTZ joystick keyboard controller.
Additional DVR Information	User supplied contact information.
Run Data Manager	Opens the Data Manager application to import and export configuration, log, and map files.
Hide Video Noise (Lines)	Adjust settings to hide analog camera video noise.
Audio	Enables Audio for Live and Remote functionality

Configuring Import / Export

Creating the custom settings for this application may take some time, depending on the number of DVR units connected, and the complexity of maps, etc. The import/export features provide the option to perform set up once and reuse the settings when desired. This option may need to be used when:

Using multiple stations. It may be practical to import settings if more than one station is used.

Installing new software versions. Upgrading to a newer software version sometimes forces the deletion of settings.

Windows / Software Failure. Windows may become unstable for a number of reasons (viruses, incompatible software, etc).

Exporting Settings

1. Select Tools > Settings > Admin.
2. Click Run Data Manager.
3. Click Export.
4. Enter a file name and click the folder icon to select a save location.
5. Select settings to export and click OK.
6. Click Run to complete export.

Import Settings

1. Select Tools > Settings > Admin.
2. Click Run Data Manager.
3. Click Import.
4. Click the folder icon to select a previously saved configuration file and click OK
5. Click Run to complete import.

Scheduling Log Cleanup

1. Select Tools > Settings > Admin.
2. Click Cleanup Schedule Setting.
3. Select the Use Cleaning Alarm Log File Automatically check box.
4. Select the desired setting for the time to keep log files, how often and what time to delete log files.

The screenshot shows the "Alarm Log Cleanup Setting" dialog box. It has a blue title bar and a light beige background. At the top, there is a checkbox labeled "Use cleaning alarm log file automatically". Below this, a note states: "If you select this option, you can delete old log data. For cleaning your alarm log file, you can't use the emergency alarm agent and the alarm monitor." Underneath the note is a text input field with the value "10" and the label "(days)".


Below this section are two sub-sections: "Period" and "Time Selection". The "Period" section has four radio buttons: "Every Day" (selected), "Every Week", "Every Month", and "Once". The "Time Selection" section has three input fields: "Hour" with the value "3", "Minute" with the value "46", and "AM/PM" with a dropdown menu set to "PM".

At the bottom of the dialog, there is another checkbox labeled "Resize alarm log file". Below it, a text input field has the value "3" and the label "(MB)".

At the very bottom, there are two buttons: "OK" and "Cancel".


USER MANAGEMENT

SCS allows the administrator to define user privileges. User privileges are defined using two groups, General users and Power users. The General Users group has fewer privileges than the Power User group. In the Functions window the groups can be custom-defined according to a preset series of options.

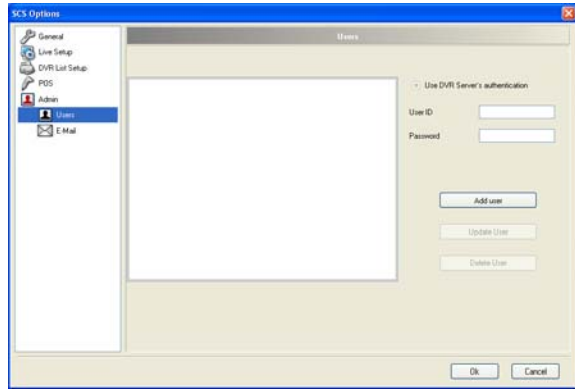

Creating Users

1. Open the User Management window. Tools > Settings > Users.
 2. Click Add User.
- Tip** Select the User DVR Server's Authentication check box to use the user ID and privileges defined by the DVR server.
3. Enter a username in the User ID box.
 4. Enter and confirm a password.
 5. From the Server Access Permission list, select the DVR check boxes to allow server access for the user.
 6. From the Permissions list, select the Functions to allow the user to access.
 7. From the Hidden Camera list, select cameras to hide from the user.
 8. Click OK.

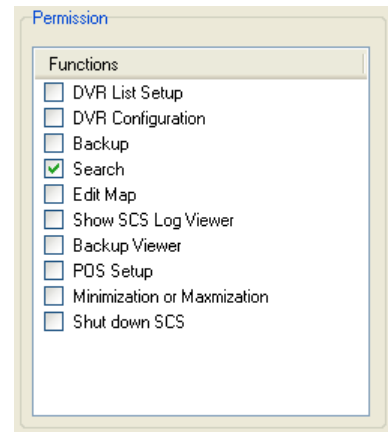

Editing Users


1. Open the User Management window. Tools > Settings > Users.
2. Select a user listed in the User window.
3. Click Update User.
4. Perform the desired changes; change the password, user permissions, or server access.
5. Click OK to apply the changes.

E-MAIL ALERT SETUP

Configure the E-mail Setup window to send e-mail alerts to users based on alarm events.

General E-mail Setup


1. Open the E-mail Setup window. Tools > Settings > E-mail and click the General tab.
2. Select the Enable E-Mail Alarm check box.
3. Enter the Display Name and E-Mail Address of the e-mail account used to send e-mail alerts.
4. Enter the Primary SMTP Settings and click Test.
5. If available, click the checkbox to Use Secondary SMTP Setting and enter the secondary SMTP settings.

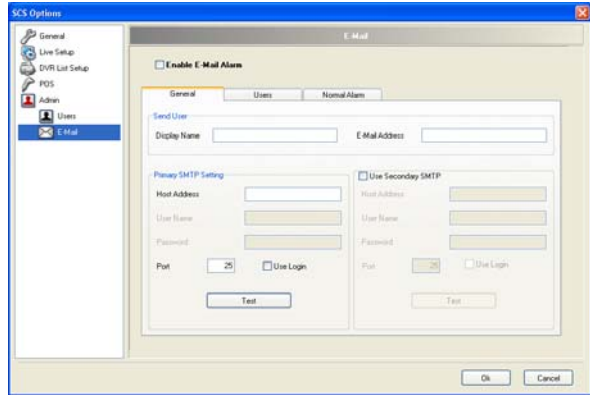

Users E-mail Setup

Creating a User

1. Open the E-mail Setup window. Tools > Settings > E-mail and click the Users tab.
2. Enter the user's name in the Recipient Name box.
3. Enter the user's E-Mail Address.
4. Click Add.

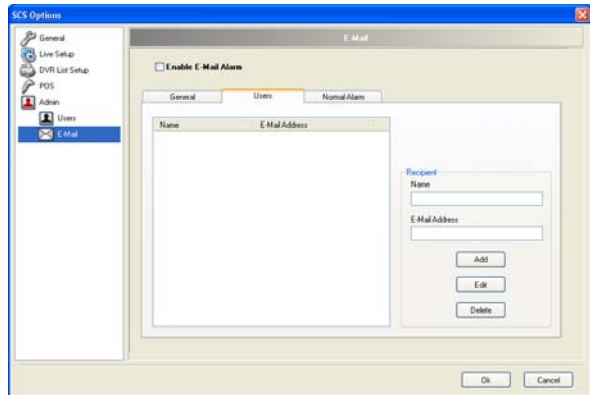

Activating a User

1. Open the E-mail Setup window. Tools > Settings > E-mail.
2. Click the Users tab.
3. Click the check box next to a user name.

NOTE: Only activated users will receive e-mail notification of alarm events.

Editing a User


1. Open the E-mail Setup window. Tools > Settings > E-mail.
2. Click the Users tab.
3. Select the user from the list
4. Edit the user's name and/or e-mail address
5. Click Edit to apply changes

Deleting a User

1. Open the E-mail Setup window. Tools > Settings > E-mail.
2. Click the Users tab.
3. Select a user from the list.
4. Click Delete to remove the user.

Normal Alarm E-mail Setup

1. Open the E-mail Setup window.
Tools > Settings > E-mail.
2. Set up the General tab.
3. Create e-mail users.
4. Click the Normal Alarm tab.
5. Select the Send E-Mail On Normal Alarm Event check box.
6. Select the alarm type to send e-mails on.
7. Define how often to send e-mail notices.

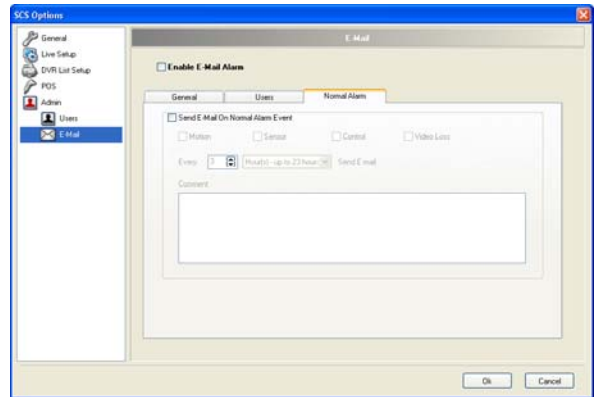


NOTES:

MAPS

- Map Overview
- Adding a Map File
- Adding An HTML Map
- Opening a Map
- Closing a Map
- Placing Markers on a Map

MAP OVERVIEW

The SCS software is capable of importing maps and associating cameras and sensors to locations on the map, as well as linking maps together. This feature allows user to quickly identify alarm zones and view the related video.

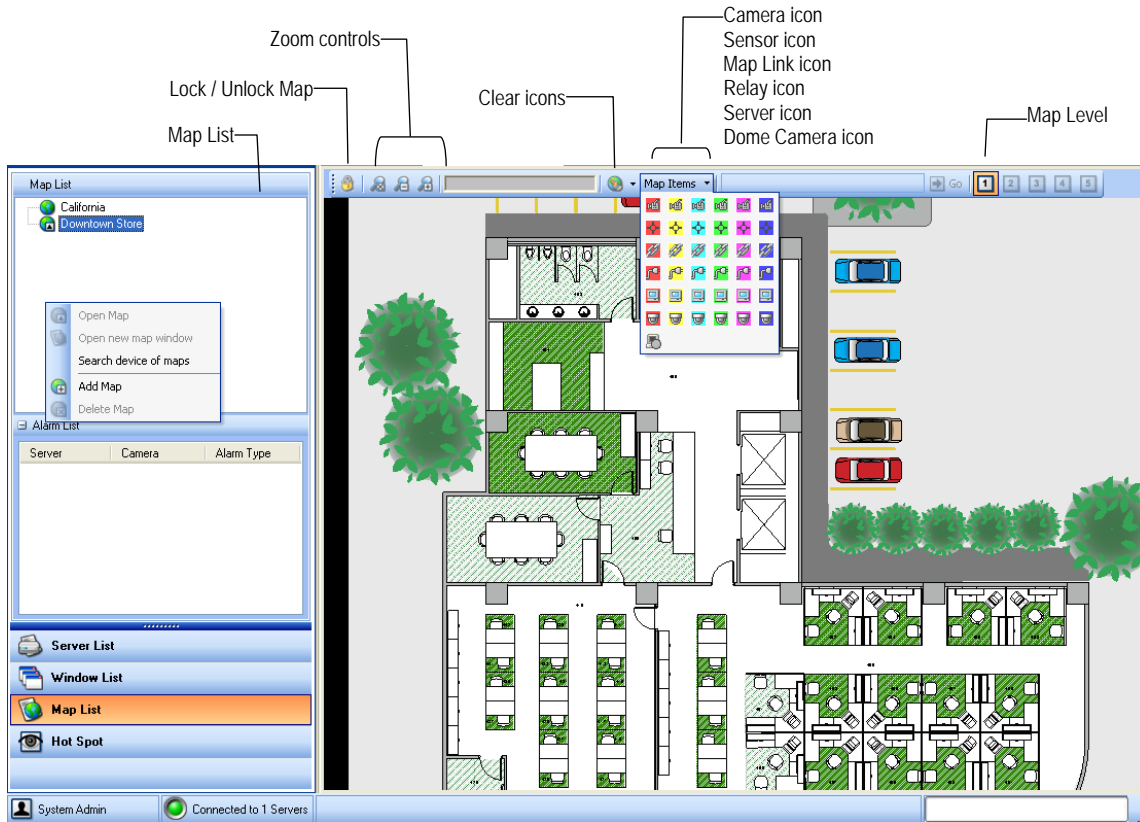

Open new map window	Opens an additional Map window. The default settings only allow one map open at a time.
Search device of maps	Search for specific devices/icons on the map.
Map Level	Displays the level of the open map.

ADDING A MAP FILE

Import as many maps as necessary. Maps are listed in the Map List in the order that they are added so name the files in a manner that allows for easy recognition.

1. Open a map. View > Other Windows > Map List or click the Map List shortcut.
2. Right-click the Map List and select Add Map.
3. Enter a name in the New Map Name box. Use a name that will easily identify the map.
4. Click Find to browse for the map file.
5. Select the file. Supported file types include:
 - Auto CAD files (up to R14) – DFX, DWG
 - Standard image files – JPG, BMP, EMF, WMF
6. Enter a comment to be included in the Information display for the map.

ADDING AN HTML MAP

1. Locate an HTML map in a preferred online map service such as Google Maps or Microsoft Live Search.
2. Copy the permalink to the clipboard.
3. Right-click the Map List and select Add Map.
4. Enter a name in the New Map Name box. Use a name that will easily identify the map.
5. Paste the permalink of the HTML map in the File Name box.
6. Click the URL check box
7. Enter a comment to be included in the Information display for the map.


OPENING A MAP

Right-click the map name and select Open Map.

- or -

Double-click the map name.

CLOSING A MAP

To close the map display tab, click  in the top right corner.

CREATING MAP LEVELS

If you have many map files associated with your DVRs you may want to organize the maps by level. Organize the maps so that lower level maps are grouped under the higher level maps. For example, if your first level map is the state of California, you might want maps of Los Angeles, Sacramento and San Francisco to be second level maps. You can create up to four levels of maps.

To create a new map level:

In the map list, drag a map over another map name to organize it as a lower level map.


PLACING MARKERS ON A MAP

Placing cameras, sensors, relays, servers and links allows easy identification of the locations where cameras and alarms are located, as well as the ability to link between multiple area maps.

Attaching Cameras/Sensors


Open a map. View > Other Windows > Map List or click the Map List shortcut.

1. Click the arrow next to Map Items and click the desired icon.
2. Click the location on the map to place the icon.
3. Select a DVR from the Server list.
4. Select a specific camera, sensor or relay from the Camera list.
5. Select the color of camera, sensor or relay from the Type list.
6. Select the desired Icon Size from the list.
7. Click OK

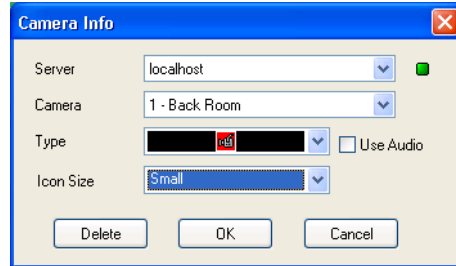

Attaching Map Links


1. Open a map. View > Other Windows > Map List or click the Map List shortcut.
2. Click the arrow next to Map Items and click the desired icon.
3. Click the location on the map to place the icon.
4. Select a map from the MapName list.
5. Select the color of the map icon from the Type list.
6. Click OK

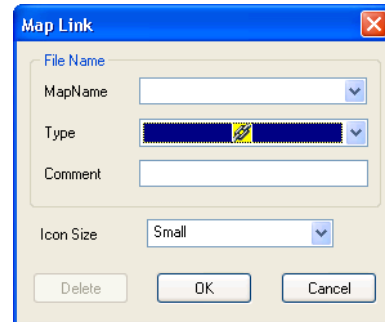

Changing Alarm Colors


The colors of the three alarm types can be customized in the SCS Options window. It may be necessary to change the alarm colors depending on the colors of the map. Customize the color and alarm time for Sensor, Motion and Video Loss events.

1. Open the General setup window. Click the Settings button and then click General.
2. Change the Map Alarm colors.
3. Select the Auto-switching to map event check box to open the associated map on an alarm event.
4. Enter the time in seconds for the alarm to flash after activation.
5. Click OK.

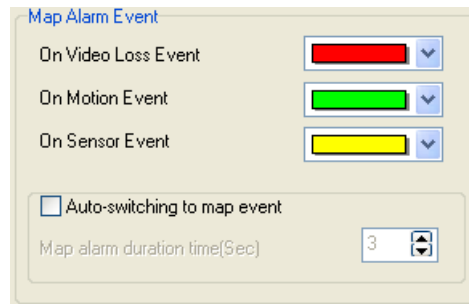

Adding a Map Alarm Sound

1. Open the General setup window. Click the Settings button and then click General.
2. Select the Use Map Alarm Sound check box.
3. Select Beep or Wave File.
4. If using a Wave file, click the folder icon to browse to the file location.
5. Click Test.
6. Click OK.

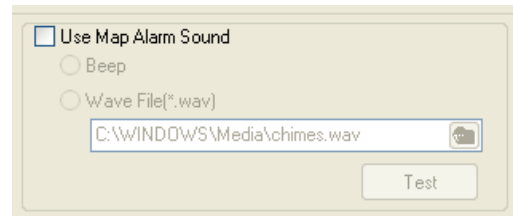

Viewing Video on Alarm

When the Alarms are activated, colored circles will flash around the sensor icon in the map. To view the camera associated with the alarm, double-click the flashing sensor icon. The video will open in a new window.


NOTES:

VIDEO BACKUP

- Network Backup
- Clip Backup

NETWORK BACKUP

The Network Backup window allows you to backup all cameras on the selected DVR to a local or network drive.

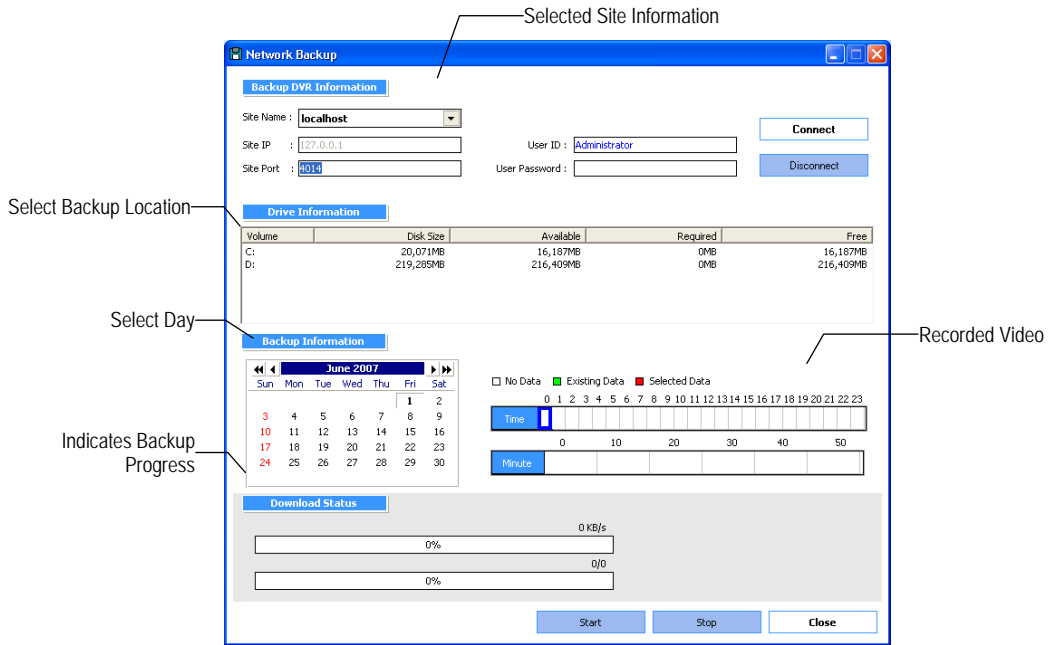


Backing up All Cameras

1. Open the Network Backup window. Device Management > Network Backup.
2. Select the desired DVR server from the Site Name list and enter a user ID and password.
3. Click Connect.
4. Click on a date on the calendar. Browse to preceding months/years using the arrows.
5. Select blocks of time that contain existing data, selected block will turn red. Clear blocks by clicking on them again.
6. Select a backup location from the Drive Information box.
7. Click Start. The Download Status section will display backup progress
8. To stop a backup already in progress, click the Stop Button

NOTE: If the amount of video exceeds the storage capacity of the selected media, an error message will display. If this happens, reduce the amount of video in the backup or select a backup media with a larger storage capacity.

CLIP BACKUP

The Clip Backup window allows you to backup one or more cameras on the current DVR to a local drive, CD-ROM or USB device.

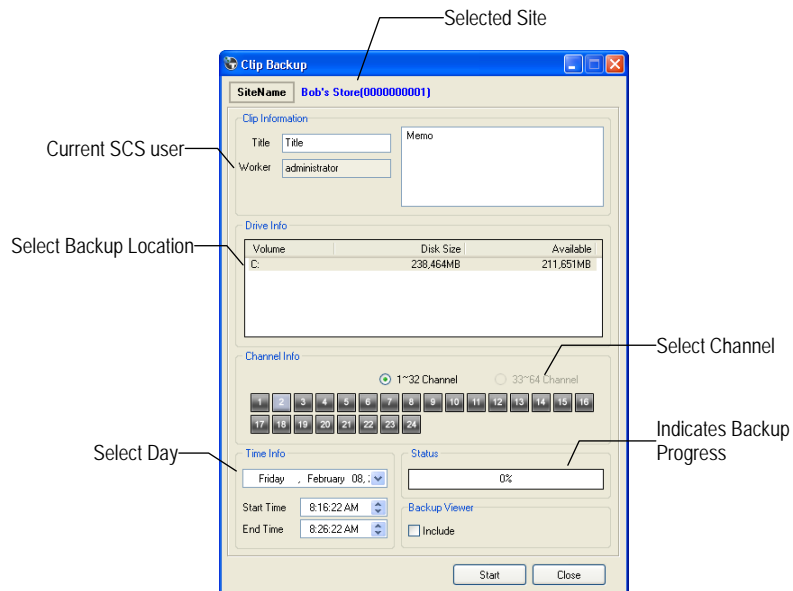

Backing up Selected Cameras

1. Select the desired DVR server from the Connection List.
2. Open the Clip Backup window. Device Management > Clip Backup.
3. Type a name to identify the clip in the Title box.
4. Type a note in the memo box if desired.
5. Select an available drive in the Drive Info box.
6. Select one or more cameras. Clear cameras by clicking on them again.
7. In the Time Info section select the desired date and Start and End Time for the clip.
8. To include the proprietary Backup Viewer application with the backup clip, select the Include check box under Backup Viewer.
9. Click Start. The Status section will display backup progress

NOTE: If the amount of video exceeds the storage capacity of the selected media, an error message will display. If this happens, reduce the amount of video in the backup or select backup media with a larger storage capacity.

NOTES:

SEARCH


- Performing a Basic Search
- Preview Search
- Index Search
- Status Search
- POS Search
- Multiple Search

SEARCH OVERVIEW

The SCS Software has several options to allow easy searching to find specific video. From Motion and Sensor indexing to calendar views showing days with recorded video, the SCS Software is designed to help the user quickly located specific data.

There are two types of Search windows:

- *Standard Search* – Provides multiple searching options but only allows searching video of one DVR at a time.
- *Multiple Search* – Allows searching of video from multiple DVRs simultaneously.

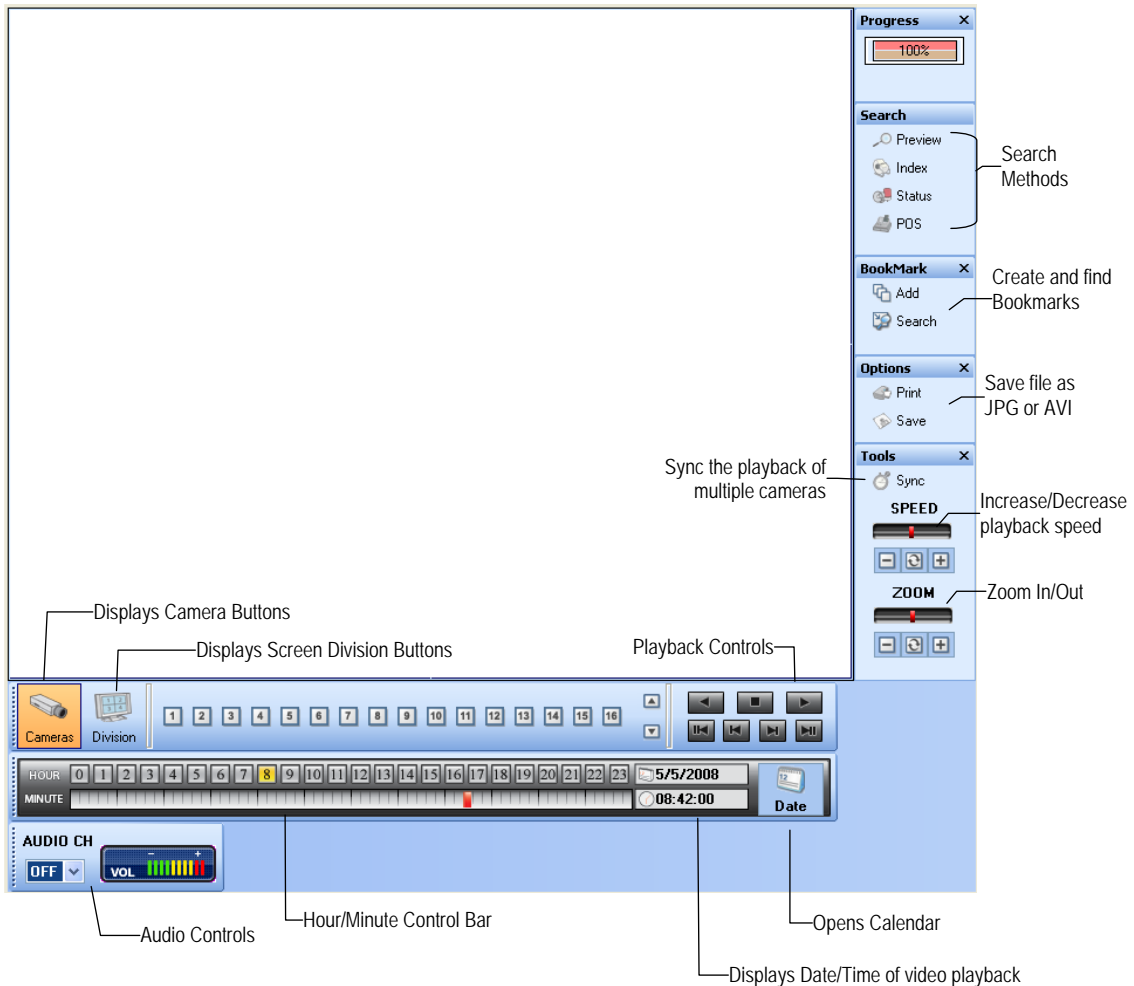


Performing a Basic Search

1. Right-click on a DVR or camera in the Connection list and select Show Search Display – or – click the Search button at the top of the screen.
2. Click the Date button to open the Calendar window.
3. Select a date.
4. Select the time using the Hour/Minute control bar.
5. Select one or more cameras with the camera buttons.
6. Start playback using the Playback Controls. Video can be played forwards, backwards and frame-by-frame.

Bookmarks

Use bookmarks to mark a video clip during a search. Quickly find bookmarked clips for later review or backup.


1. Perform a search for the desired video.
2. Stop playback at the beginning of the desired clip.
3. Under Bookmark, click Add.
4. Type a name to identify the bookmark in the Bookmark Title box.
5. Enter a memo or notes in the Memo box.
6. You may also select additional channels to include video at different locations recorded at the same time.
7. Click Add.

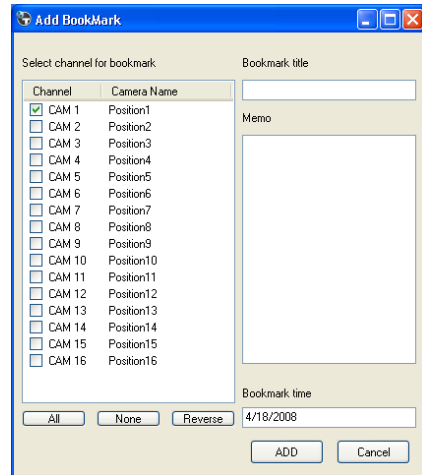

Search Bookmarks

Access previously bookmarked points of recorded video and open them in the Search screen

1. From the Search screen, under Bookmark click Search.
2. Select the desired bookmark from the list.
3. Click Search, the recorded video will open at the bookmarked point in the search screen.

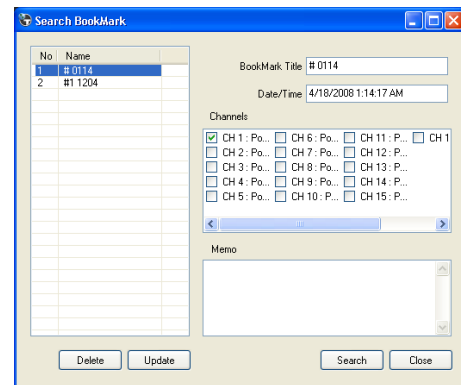

Modify Bookmarks


You can modify a previously created bookmark to change the start time of the clip, add additional comments, change the title, or add additional cameras.

1. From the Search screen, under Bookmark click Search.
2. Select the desired bookmark from the list.
3. Make the desired change.
4. Click Update.
5. When the modification is complete, click Cancel to close the window.

Save to JPG or AVI

The Save function allows for the export of single images in the .JPG file format or video clips in .AVI format. .JPG and .AVI file formats are the most commonly used graphical formats used today. Virtually every computer offers support for these file formats which makes them ideal for saving images/video.

- *JPG* – Optimized for compressing full-color or grayscale photographic images. .JPG images are 24-bit (16.7 million colors) graphics. .JPG is used to save a single image or frame.
- *AVI* – Can be stored uncompressed but is typically compressed using a Windows-supplied or third-party compression and decompression module called a codec. AVI is used to save video clips.

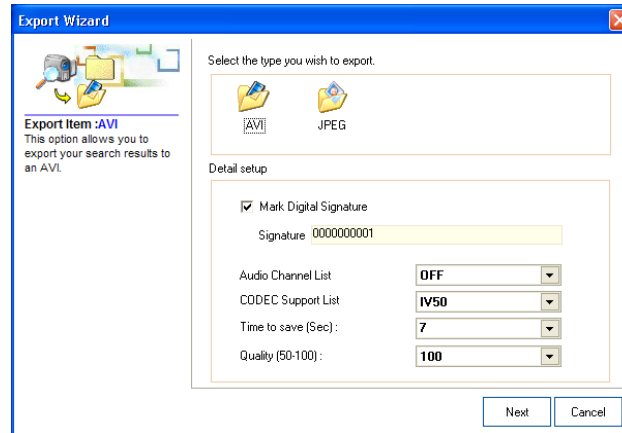

1. Perform a Basic, Preview, Index or Status Search to locate saved video.
2. After locating the desired video, click the Save Button to open the Export Wizard window.
3. Select the type of file format: .AVI for a video clip or .JPG for a single frame
4. If saving a video clip, select a compression codec, length of clip (seconds) and quality.
5. Click the Next Button
6. Enter a file name in the Export Name Field
7. Select a location to save the file by browsing the file tree
8. Click the Next Button
9. Follow the on-screen instructions to complete the process

Printing an Image


The SCS software can print a recorded image to a local or network printer.

1. Perform a Basic, Preview, Index or Status Search to locate saved video.
2. After locating the desired video, click the Print Button to open the Print Options window. Depending on the printer used, there may be several printing options available. Refer to the printer manual for more information.
3. Click the Print Button to print the selected image.

NOTE: The message "NO DEFAULT PRINTERS INSTALLED" will display if no printer is connected.

PREVIEW SEARCH

The Preview Search can be used in a number of circumstances to quickly find the exact moment where an event (such as a theft) occurred. The Preview Search displays a 24-hour visual overview of a single camera by separating a 24-hour period (1 day) into 24 images, one image for each hour of the day. The search can then be further narrowed down into ten minute increments and one minute increments by simply selecting one of the images displayed. The example below shows how the Preview Search works.

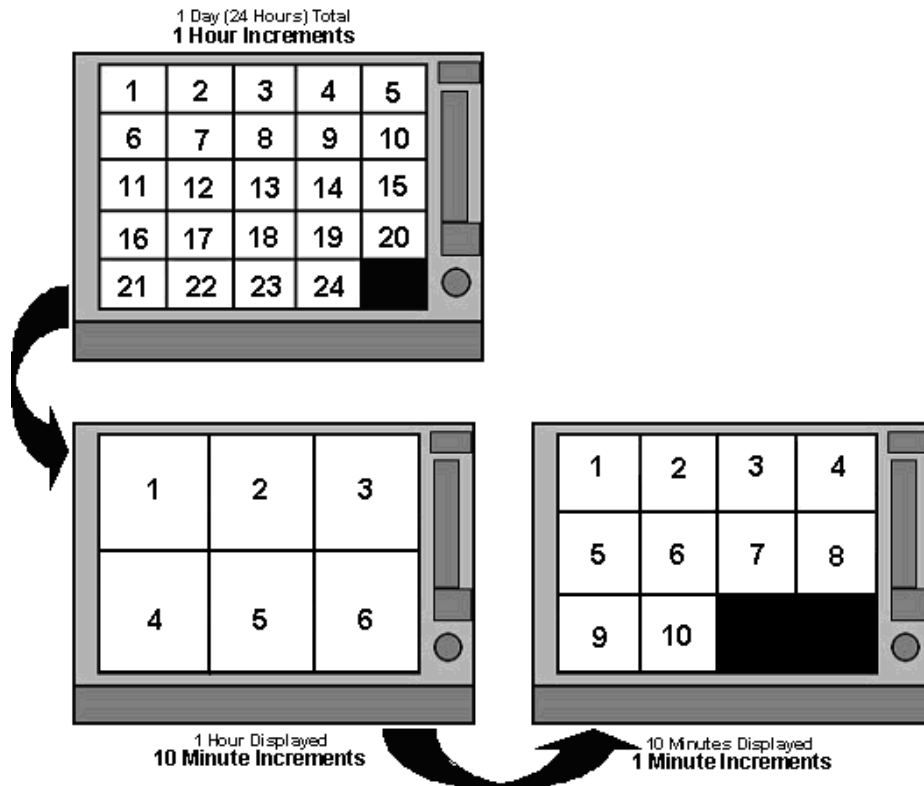

The first screen has 24 images displayed. Each image represents the first second of each hour. If there is no image recorded during that period, nothing will be displayed.


Double-click an image to select an hour. A new screen appears with 6 images, each one representing a 10-minute segment of video. Double-click an image to select a 10-minute segment. The final screen appears with the 10-minute segment broken into 1-minute increments (10 images).

Performing a Preview Search

1. Right-click on a DVR or camera in the Connection list and select Show Search Display – or – click the Search Button at the top of the screen.
2. Select a single camera. Turn off all cameras but one or double-click a video image to display it full screen.
3. Click the Date Button to select a date from the calendar.
4. Click the Preview Search Button to display 24 images. If there is no recorded video during a portion of the day, “No Image” will be displayed in place of an image.
5. Refine the search by double-clicking an image to display six 10-minute increment images.
6. Refine the search further by double-clicking an image to display ten 1-minute increment images.
7. Double-click an image to display a 1-minute segment of video. Return to the previous display by right-clicking an image.
8. Use the playback controls to play the video segment.
9. To exit Preview Search with the current image still selected, click the Preview Search button to clear it.


INDEX SEARCH

Using the Index Search can decrease the amount of time spent searching through saved video. The Index Search allows a user to perform a search based on criteria such as Sensor, Motion and Instant Record events.

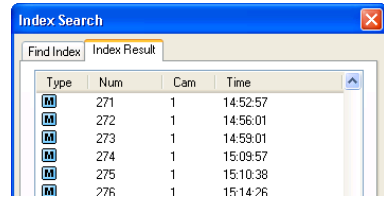


Performing an Index Search

1. Right-click a DVR or camera in the Connection List and select Search Display – or – click Search Display at the top of the screen.
2. Click the Date button to open the calendar and select a date.
3. Click the Index button to open the Index Search window.
4. Select one or more cameras check boxes or select the Select All check box.
5. Select the type of event to search (Sensor, Motion, Instant Record) or select the All Event option.
6. The default search time is a 24 hour period. To specify a search interval, select the Selected Time check box and define a Start and End Time.
7. Click Find. There may be a delay while results are returned. Results will display on the Index Result tab. If no results are found, "No Data Received" will appear.
8. Double-click a displayed result to display the associated video.
9. To apply a selected result to the Main Search, click the Close button.

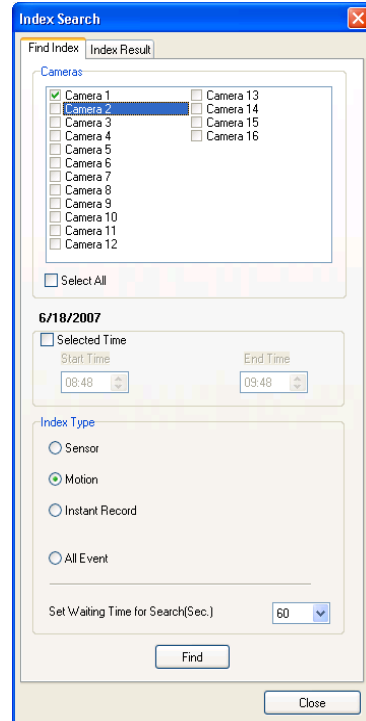

STATUS SEARCH

The Status Search option displays a timeline in graph format. Scroll through multiple cameras and easily locate hours with recorded video.

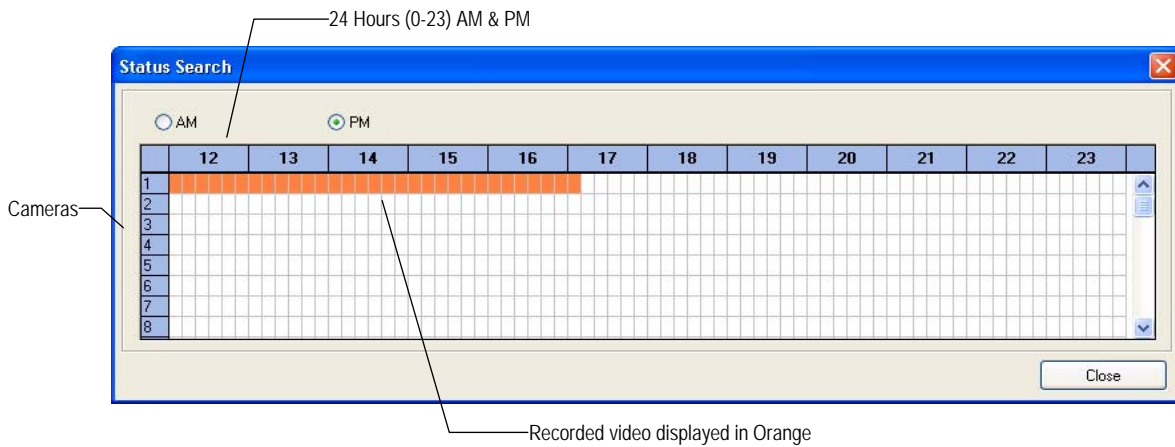

Performing a Status Search

1. Right-click a DVR or camera in the Connection List and select Search Display – or – click Search Display at the top of the screen.
2. Click the Date button to open the calendar and select a date.
3. Click on the orange recorded video block.
4. Use the arrow keys on the keyboard or the mouse to navigate the Status Search display.
5. After locating the desired video use the playback controls to play forwards, reverse or frame-by-frame.


POS SEARCH

See the POS Features chapter for more information on using the POS Search feature.

MULTIPLE SEARCH

The Multiple Search window allows users to search video recorded on multiple DVRs

- *Standard Search* – Provides multiple searching options but only allows searching video of one DVR at a time.
- *Multiple Search* – Allows searching of video from multiple DVRs simultaneously.

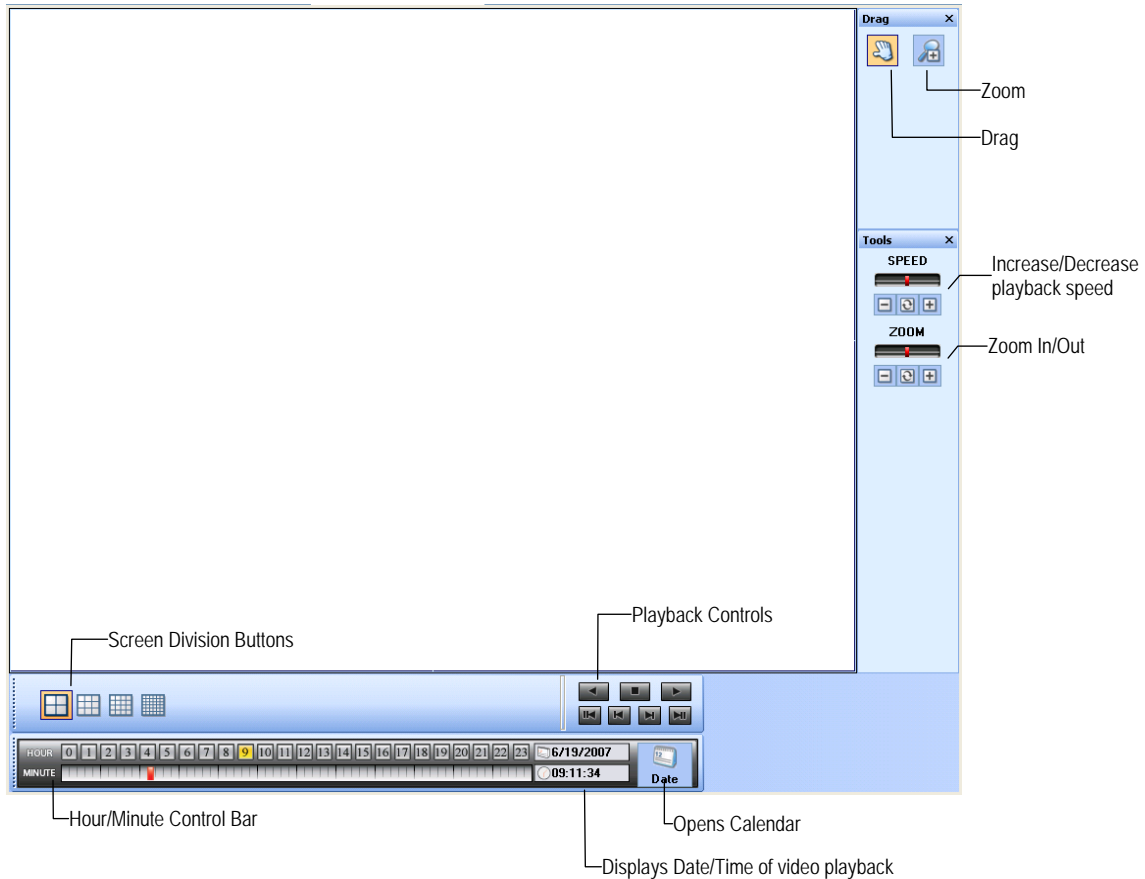

Performing a Multiple DVR Search

1. Open the Multiple Search window. *Window > Show Multiple Search.*
2. Click the Date button to open the Calendar window. Select a date to search.
3. Select a time using the Hour/Minute Control Bar.
4. Drag cameras from the Connection list to the Multiple Search Display.
5. Click Play.
6. The Playback Controls can be used to play video forward, backward, and frame-by-frame.

NOTES:


NOTES:

LOG FILES

- SCS System Log

SCS SYSTEM LOG

The SCS System Log keeps track of when the software is opened closed and which users log in and log out.

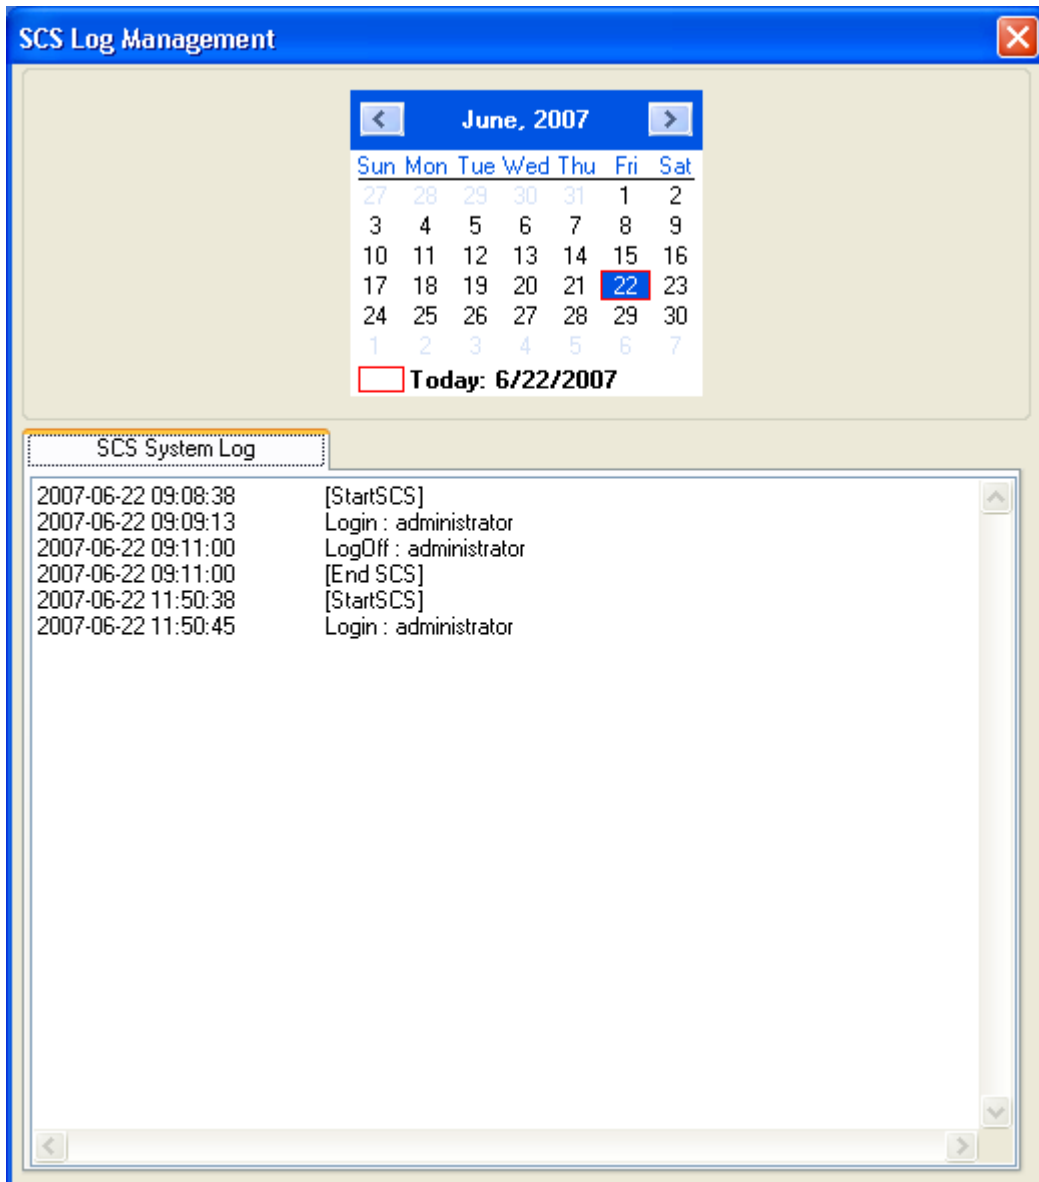

View the SCS Log

1. Open the Log Management window. Window > Log – or – click the Log button on the toolbar.
2. Click a date on the calendar to view the log files from that day.

NOTE: The current day is circled in red, and the selected day is highlighted in blue.

EVENT MANAGEMENT

- Event Viewer Window
- Filtering Alarm Events
- Opening an Alarm Event

EVENT VIEWER WINDOW

The Event Viewer window is used to view different types of alarms that are coming from the DVRs, including Video Signal Loss and Sensor alarms.

Open the Event Viewer window by clicking Window and then Event Viewer – or – Click the Event Viewer button at the top of the screen.

Date of Alarms Displayed

Filter Alarm Events

Export Event Log

Date: 6/22/2007

DVR: [All DVR]

Event: [All Events] Read: [All]

Event Alarm List

No.	DVR Name	Event time	Device Name	User
29	Bob's Store	20:30:37 ~	Position16	
28	Bob's Store	20:30:37 ~	Position15	
27	Bob's Store	20:30:37 ~	Position14	
26	Bob's Store	20:30:37 ~	Position13	
25	Bob's Store	20:30:37 ~	Position12	
24	Bob's Store	20:30:37 ~	Position11	
23	Bob's Store	20:30:37 ~	Position10	
22	Bob's Store	20:30:37 ~	Position9	
21	Bob's Store	20:30:37 ~	Position8	
20	Bob's Store	20:30:37 ~	Position7	
19	Bob's Store	20:30:37 ~	Position6	
18	Bob's Store	20:30:37 ~	Position5	
17	Bob's Store	20:30:37 ~	Position4	
16	Bob's Store	20:30:37 ~	Position3	
15	Bob's Store	20:30:37 ~	Position1	
14	Bob's Store	20:04:31 ~	Position16	
13	Bob's Store	20:04:31 ~	Position15	
12	Bob's Store	20:04:31 ~	Position14	
11	Bob's Store	20:04:31 ~	Position13	
10	Bob's Store	20:04:31 ~	Position12	
9	Bob's Store	20:04:31 ~	Position11	
8	Bob's Store	20:04:31 ~	Position10	
7	Bob's Store	20:04:31 ~	Position9	
6	Bob's Store	20:04:31 ~	Position8	
5	Bob's Store	20:04:31 ~	Position7	
4	Bob's Store	20:04:31 ~	Position6	
3	Bob's Store	20:04:31 ~	Position5	
2	Bob's Store	20:04:31 ~	Position4	

Filtering Alarm Events

1. Select the desired date from the Date list.
2. Select the desired DVR or select All DVR from the DVR list.
3. Select the type of event from the Event list or select All Events.
4. Select Read, for events that have been reviewed, or Unread, for events that have not yet been reviewed, from the Read list or select All to include all Alarm Events.
5. Click Set Filter to display the filter results below.

Opening an Alarm Event


Double-click an alarm entry to open the search window with the associated DVR, camera and time related to the event already selected.

POS FEATURES

- POS Options
- POS Text Overlay
- POS Search

POS OPTIONS

Use the POS options to configure the POS search feature to search data recorded on DVRs with a POS upgrade

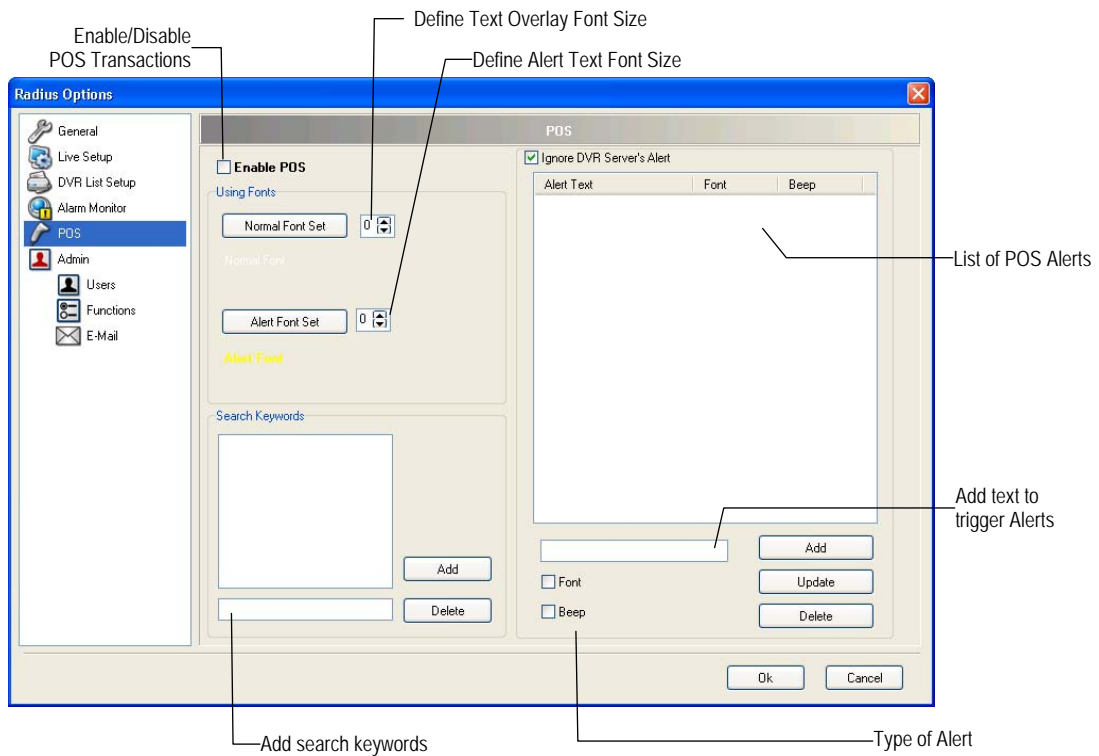

Add POS Search Keywords

1. Select Tools > Settings > POS.
2. Select Enable POS.
3. Enter a search keyword.
4. Click the Add button in the Search Keywords section. The keyword will be added to the box above and be available in the list of search terms in the POS Search window.

Add POS Alert Text

1. Select Tools > Settings > POS.
2. Select Enable POS.
3. Enter text to trigger an alert.
4. Select the Font or Beep check box to define the type of alert.
5. Click the Add button.
6. Select the check box next to the alert text above to enable the alert. Clear the check box to disable the alert.

POS TEXT OVERLAY

The POS Text Overlay displays POS data on the live video display.



TURN TEXT OVERLAY ON

1. Right-click a camera to open the Camera Options.
2. Select POS On.
3. POS data will display over the video in the Live Display.


Turn Text Overlay Off

1. Right-click on a camera to open the Camera Options.
2. Select POS Off.
3. POS data will not display on video in the Live Display.

POS SEARCH

The POS Search allows users to search video using POS data including specific registers, items or conditions.

CAUTION: POS index search simultaneously from two separate SCS work stations is not recommended.

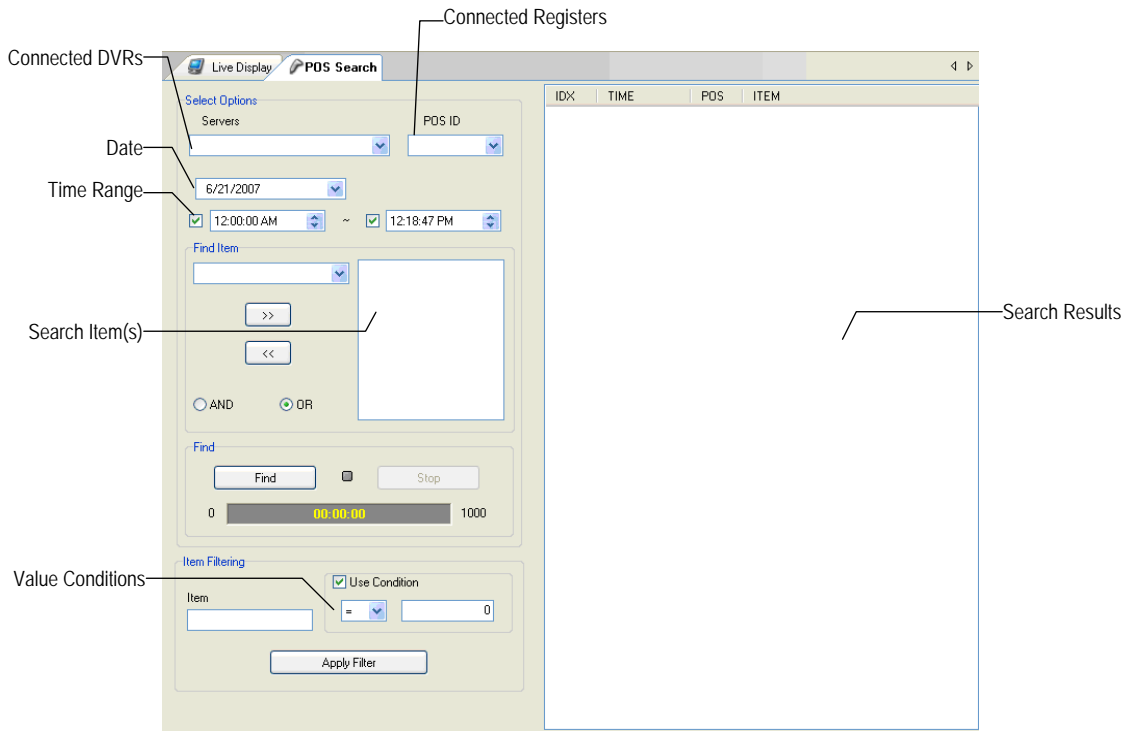

Search POS Data

1. Open the POS Search Display. Window > POS Search.
2. Select a DVR from the Servers list.
3. Select a register from the POS ID list.
4. Define the Date and Time parameters.
5. Enter an item name in the Find Items box or select a predefined item from the list.
6. Click the >> button to add it to the box on the right.
7. Select AND or OR to apply to the item names entered above.
8. Click the Find button. The results will display on the right side of the screen.

Filter POS Search Results

1. Perform a POS Search.
2. Enter an item name in the Item box under Item Filtering.
3. To define a value for the item select the Use Condition check box, select a value condition and enter the value in the blank box. The results will display on the right side of the screen.

