



This quick operation guide is a quick reference for users to connect and install the video server and only provides basic information on the device's settings and operation. For details, refer to the User Manual.

Connections

Front

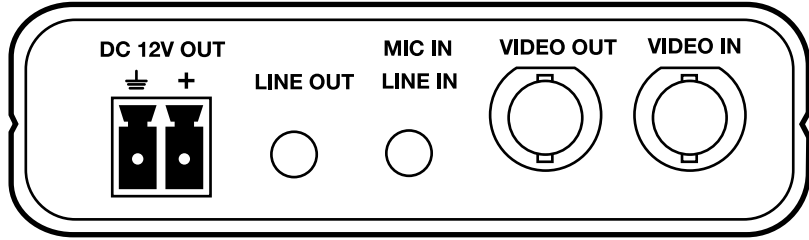

Rear

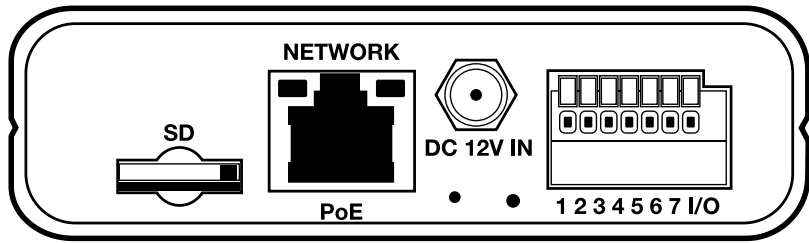


Connector	Pin No.	Definition
DC 12V OUT	-	Power Connection
LINE OUT	-	Audio Output
MIC IN / LINE IN	-	Audio Input and Microphone Input
VIDEO OUT	-	Analog Video Output to Monitor
VIDEO IN	-	Analog Video Input to Video Server
SD	-	Micro SD Card Slot
NETWORK / PoE	-	RJ-45 10/100 Mbps Ethernet / PoE
DC 12V IN	-	Power Input
RS-485	1	D+
	2	D-
	3	GND
ALARM I/O	4	GND
	5	IN+
	6	OUT-
	7	OUT+

Tip Connect the video cable to the video server before connecting power. If you connect the power first the video server may not detect the video signal.

Network Installation

Connect one end of a CAT5 Ethernet cable to the Ethernet port (RJ45) on the video server and the other end to the network switch or the DVR.

Note If you are connecting the video server directly to a DVR, a crossover cable may be necessary.



Check the status of the network connection by looking at the link indicator and activity indicator LEDs. If the LEDs are not lit check your network connection. The green link LED indicates a network connection and the orange activity LED flashes to indicate network activity.

Connecting to the Video Server

To access the setup menu, you need to install the viewer software on your PC or DVR. The viewer software will install automatically the first time you connect to the camera. If your internet browser doesn't install the viewer software, check the security settings or ActiveX controls and plug-in settings. If your internet browser asks for permission to install the ActiveX control, you must allow the ActiveX control to continue the installation.

To enable installation of ActiveX controls on Internet Explorer:

1. From the **Tools** menu, click **Internet Options**.
2. Click the **Security** tab and then click the **Internet** icon.
3. Click **Custom Level** and ensure that all **ActiveX controls and plug-ins** are set to **Enable** or **Prompt**.

To add the camera to your trusted sites:

1. From the **Tools** menu, click **Internet Options**.
2. Click the **Security** tab and then click the **Trusted Sites** icon.
3. Click **Sites**.
4. Type the **IP Address** of the camera. Ensure that the **Require server verification** check box is cleared.

For additional information on adjusting the settings of your internet browser contact your system administrator.

Assigning an IP Address

Securgen IP devices come with the default IP address 192.168.0.250. To reset the IP address, use the IP Camera Finder application to set a new static IP, or use DHCP.

The IP Camera Finder application is included on the accompanying software CD.

1. Open the Camera Finder application.
2. Click **Device Search**.
3. On the list of connected IP devices locate the desired camera and record the MAC address.
4. Right-click the camera row and select **Network Setup**.



5. Select **Static IP** and type the new IP address and other network information in the appropriate boxes.
- or -
Select the **DHCP** option on the **Network Setup** window and then click **Apply**.
6. Click **OK** to acknowledge the change.
7. After one minute, click **Device Search** to search for all connected IP devices.
8. Locate the camera using the MAC address recorded earlier and double click the camera row.
9. Type the **Username** and **Password** to access the camera.



The username and password are case sensitive. It is strongly recommended that the password be changed after the initial setup to prevent unauthorized access.

Username – Admin

Password – 1234